



ConnectCore

for i.MX6

Hardware Reference Manual

ConnectCore for i.MX6 Hardware Reference Manual

90001394

Revision	Date	Description
A	July 2014	First release
B	March 2015	Added MCA information; added drawings for RF antennas and pinouts; added information for eMMC-less variants; updated Japan and Bootstrap information.
C	February 2016	Updated the template.

Product documentation

To find up-to-date documentation for all Digi products, visit www.digi.com/documentation.

To provide feedback on this documentation, send your comments to techcomm@digi.com.

Trademarks and copyright

Digi, Digi International, and the Digi logo are trademarks or registered trademarks in the United States and other countries worldwide. All other trademarks mentioned in this document are the property of their respective owners.

© 2016 Digi International. All rights reserved.

Disclaimers

Information in this document is subject to change without notice and does not represent a commitment on the part of Digi International. Digi provides this document “as is,” without warranty of any kind, expressed or implied, including, but not limited to, the implied warranties of fitness or merchantability for a particular purpose. Digi may make improvements and/or changes in this manual or in the product(s) and/or the program(s) described in this manual at any time.

Warranty

To view product warranties online, visit www.digi.com/howtobuy/terms.

Customer support

Digi offers multiple technical support plans and service packages to help our customers get the most out of their Digi product. For information on Technical Support plans and pricing, please contact us at 952.912.3456 or visit www.digi.com/support.

If you have a customer account, sign in to the Customer Support Web Portal at www.digi.com/support/eservice.

Contents

About the ConnectCore 6

ConnectCore 6 Features and Functionality	5
IEEE 802.11 a/b/g/n and Bluetooth Features and Functionality	6
Module Variants	7
Block Diagram of the Freescale i.MX6	7
Power Supply Architecture of the ConnectCore 6	8
Bootstrap	11
Module Pinout of the ConnectCore 6	13
ConnectCore 6 Pinout Information	13
Signal Usage Limitations	73
MCA Hardware	74
Supported Devices	74
MCA Pinout	74
Shared I2C Bus	86
Shared SPI Bus	86
Modules without eMMC Flash	87

Module Specifications

Mechanical specifications	89
Host PCB Footprint	90

Specifications for the ConnectCore 6

Environmental Specifications	91
Linux - Android Users	91
Moisture Sensitivity and Shelf Life	92
Mounting	92
Solder Paste Print	92
Stencil	93
Coplanarity	93
SMT Pick and Place	93
SMT Process Parameter Reference	93
Reflow Profile Using Seven Zone Oven, SAC 305Lead-Free Solder Paste (Alpha OM-340)	94

Network Interface

WLAN Standard	95
Frequency Band	95
Data Rates	95
Antenna ports	95
Modulation	96
Security/Interoperability	97
Frequency Bands	97
US, Canada	97
Europe	97
Australia, New Zealand	98
Japan	98
Ad-Hoc Mode Channels	98
5GHz HT20 and HT40 channel available	98

Receive Sensitivity	99
Transmit Power	100
Bluetooth	100
Electrical Characteristics	100
Voltage supplies	100
Power Consumption	100

Certifications

United States FCC	102
For WiFi/Bluetooth variant	102
For WiFi only variant	102
FCC Notices	103
FCC-Approved Antennas	103
RF Exposure	104
Europe (ETSI)	104
OEM Labeling Requirements	104
CE Labeling Requirements	104
Declarations of Conformity	105
Approved Antennas	105
Canada (IC)	105
Labeling Requirements	105
Transmitters with Detachable Antennas	105
Japan	106

About the ConnectCore 6

The ConnectCore 6 is an ultra-compact and highly integrated system-on-module solution based on the Freescale i.MX6 Cortex-A9 processor family.

With processor speeds up to 1.2 GHz and fully interchangeable single-/dual-/quad-core variants, the ConnectCore 6 offers a truly future-proof platform solution with scalable performance and pre-certified wireless 802.11a/b/g/n and Bluetooth 4.0, including Bluetooth Low Energy connectivity.

Its innovative and scalable design maximizes integration flexibility and significantly reduces design risk in a highly cost-effective, reliable, low-profile surface mount form factor with optimal thermal management even in the most demanding quad-core system configurations.

Seamless Cloud Connector integration as part of the Digi Linux and Android software platform support offers secure remote management and web services capabilities through the scalable Digi Device CloudSM.

In addition, Digi offers complete professional Digi Device CloudSM custom hardware and wireless design services as well as end-to-end solutions services for cloud integration and app development.

ConnectCore 6 Features and Functionality

The ConnectCore for i.MX6 module is based on the i.MX6 processor from Freescale. This processor offers a high number of interfaces. Most of these interfaces are multiplexed and are not available simultaneously. The module has the following features:

- i.MX6 single/dual/quad ARM Cortex-A9 cores operating at speeds up to 1.2GHz.
 - 32Kbytes L1 Instruction cache
 - 32Kbytes L1 Data cache
 - Up to 1MB unified Instruction/Data L2 cache
 - NEON MPE (Media Processing Engine) co-processor
- Graphical Hardware accelerators:
 - IPU (Image Processing Unit)
 - Optional VPU (Video Processing Unit)
 - Optional 2D/3D GPU (Graphics Processing Unit)
- 64-bit DDR3-1066 memory interface with a density up to 2GBytes.

- 8-bit eMMC support up to revision 4.4/4.41
- Dialog DA9063 Power Management IC (PMIC)
 - 6x DC/DC buck converters
 - 11x LDO regulators
 - RTC with rechargeable coin cell battery support
 - 10-bit ADC channels
 - GPIO pins
- Optional IEEE802.11a/b/g/n WLAN interface with spatial diversity support.
 - SoftAP (Software Access Point) support
- Optional Bluetooth 4.0 dual mode
- Optional Cortex-M0+/Cortex-M4 MCA (Microcontroller Assist) subsystem
- Debug interfaces:
 - Standard JTAG controller IEEE 1149.1
 - ETM/ETB support
- Support of i.MX6 typical interfaces:
 - 16/32-bit data/address bus
 - SATA II, 3.0Gbps (24-bit parallel bus, LVDS, HDMI, MIPI/DSI)
 - Cameras (20-bit parallel bus, MIPI/CSI)
 - MMC/SD/SDIO
 - 1x USB OTG with integrated PHY
 - 3x USB Host
- 1x Host with integrated PHY
- 2x Host with integrated HS-IC USB PHY
 - PCI Express Gen 2.0 lane
 - Gigabit Ethernet MAC
 - 10/100M Ethernet MAC
 - UART, SPI, I2C, PWM, CAN, I2S and GPIO
- Ultra-miniature SMT module (50x50mmx5mm) based on 400-LGA pads

IEEE 802.11 a/b/g/n and Bluetooth Features and Functionality

The RF interface of the ConnectCore for i.MX6 is handled by a Qualcomm-Atheros module capable of 2.4 GHz and 5 GHz connections using 802.11 a/b/g/n and Bluetooth 4.0 (Dual mode with Bluetooth Low Energy support).


The module is built with coexistence in mind and handles the BT coexistence internally. Cellular coexistence filtering is onboard to aid in designing systems susceptible to cellular interference.

Module Variants


The ConnectCore for i.MX6 module supports population options such as network interface (Wi-Fi), memory (flash, RAM), MCU-assist, processor (single, dual and quad-cores), and others.

Block Diagram of the Freescale i.MX6

The figure below shows the block diagram of the Freescale i.MX6 application processor. Not all functions are available on all processor variants.

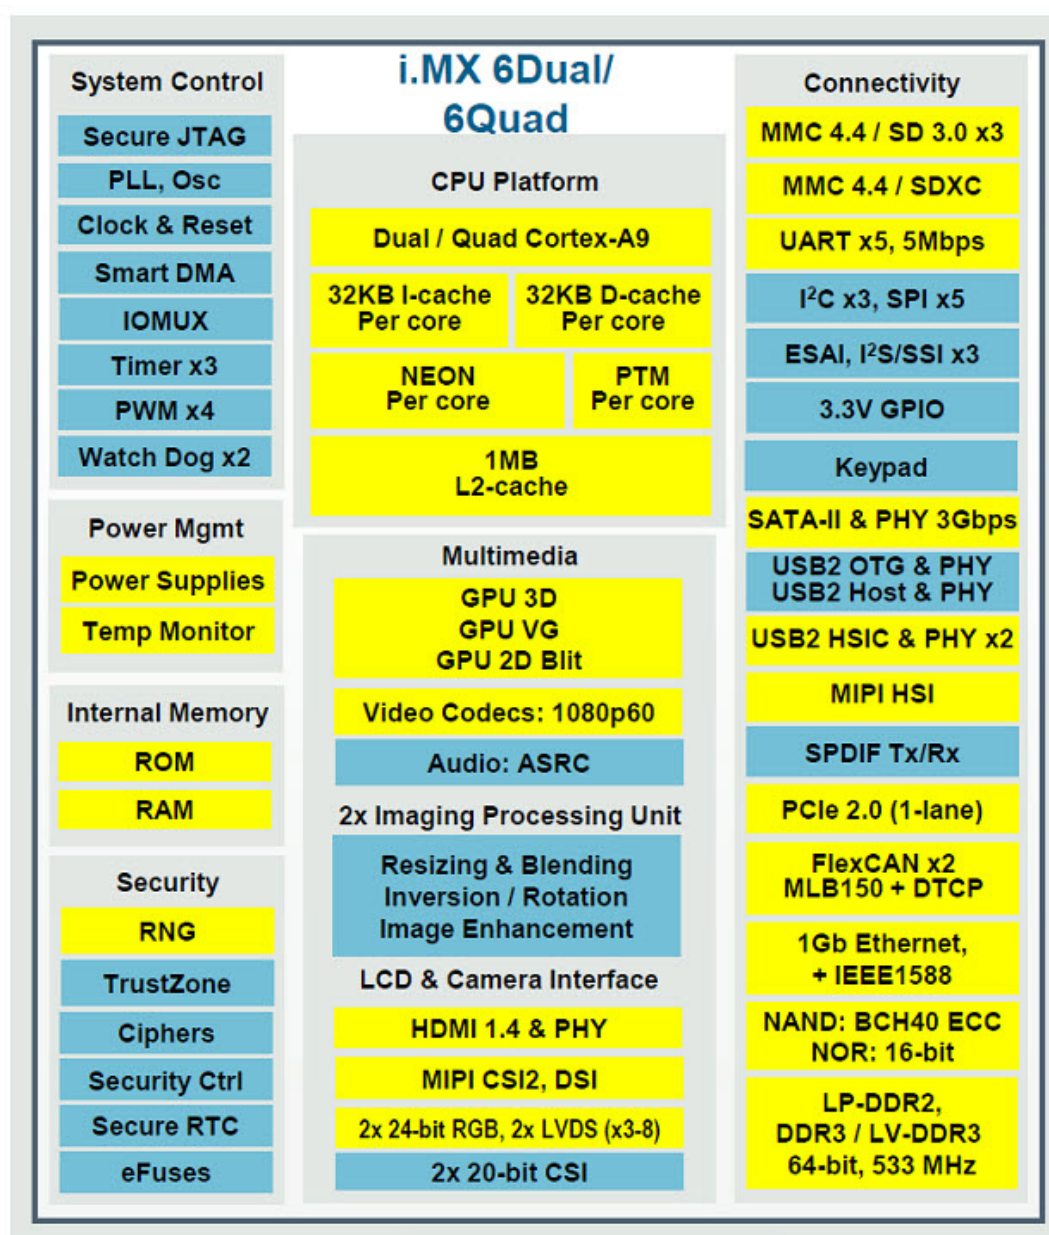

The following figure below provides a high-level block diagram of the ConnectCore for i.MX6 module.

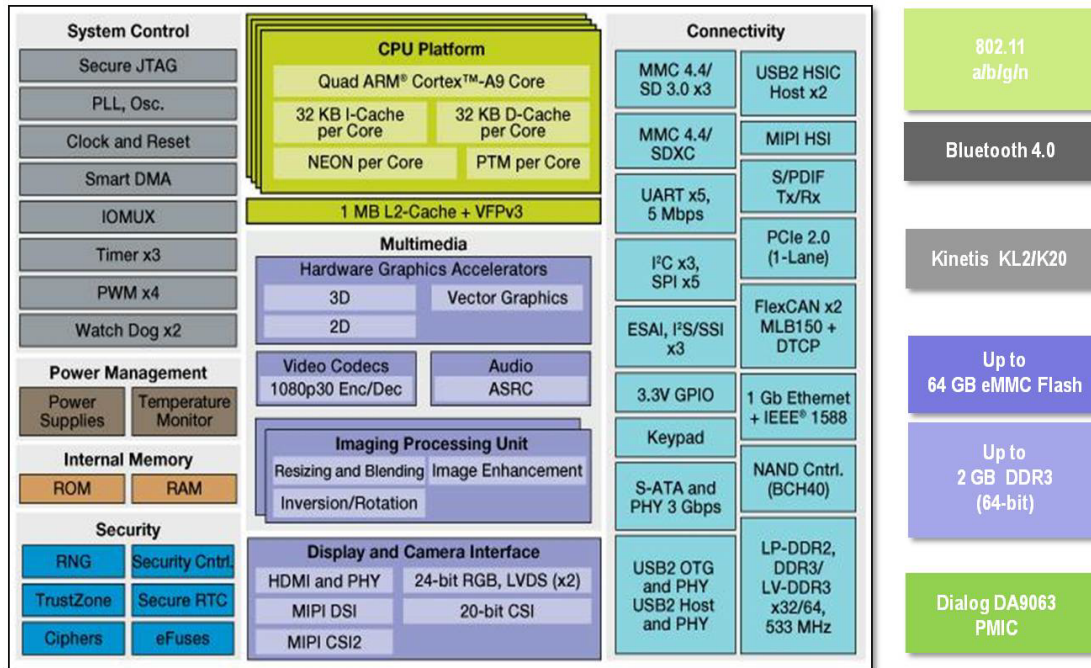

Power Supply Architecture of the ConnectCore 6

The ConnectCore for i.MX6 provides a primary 5V power supply input. This supply is the main power domain to the on-module Dialog DA9063 power management IC (PMIC), which generates all required supply voltages for the module components as well as the carrier board.

The module provides support for a backup battery (coin-cell or super cap) powering the real-time clock (RTC) on the module. In addition, rechargeable backup batteries (ML414, others) are also supported.

The PMIC generates the following power domains that are available on the module pads:

- 3.3V (GEN_3V3)

Power domain	Regulator type	Output accuracy	Maximum current	Dropout voltage (MAX)	Turn on time (MAX)	Turn off time (MAX)	Quiescent current in OFF mode (TYP)
3.3V	DC/DC	+/-3%	1500mA	-	1µA	1.2ms	-

Note The maximum current consumption mentioned above is a combination of the current consumed by the module and by the carrier board.

Moreover, 5x PMIC LDO outputs are also available on the module pads:

- VLDO3
- VLDO4
- VLDO6
- VLDO7
- VLDO8

The table below provides the characteristics of the optional LDO outputs:

LDO	Output voltage	Output accuracy	Default voltage	Maximum current	Dropout voltage (MAX)	Turn on time (MAX)	Turn off time (MAX)	Quiescent current in OFF mode (TYP)
VLDO3	0.9-3.44V	+/-3%	3.3V	200mA	150mV	1μA	300μs	1ms
VLDO4	0.9-3.44V	+/-3%	3.3V	200mA	150mV	1μA	300μs	1ms
VLDO6	0.9-3.6V	+/-3%	3.3V	200mA	150mV	1μA	200μs	1ms
VLDO7	0.9-3.6V	+/-3%	1.8V	200mA	150mV	1μA	300μs	1ms
VLDO8	0.9-3.6V	+/-3%	3.3V	200mA	150mV	1μA	300μs	1ms

Note For information about using the LDOs options, please contact Digi.
VLDO3 is used for supplying MCA processor on the module.

- The power management IC located on the module is responsible for generating all required i.MX6 processor supply voltages. The following i.MX6x supplies are available on the module pads:
- NVCC_ENET
- NVCC_EIM
- NVCC_LCD
- NVCC_CSI
- NVCC_RGMII

Some of the I/O supplies are set on the module. See the table following table:

Power domain	Connection
NVCC_GPIO	GEN_3V3
NVCC_JTAG	GEN_3V3
NVCC_NANDF	GEN_3V3
NVCC_SD1	GEN_3V3
NVCC_SD2	GEN_3V3
NVCC_SD3	GEN_3V3

The remaining I/O voltages must be set externally and are left open on the ConnectCore for i.MX6 module. See the following table for operating ranges of the remaining I/O supplies.


Power domain	Min	Type	Max
NVCC_ENET	1.65V	1.8V	3.6V
NVCC_EIM		2.8V	
NVCC_LCD		3.3V	

Power domain	Min	Type	Max
NVCC_CSI		-	
NVCC_RGMII in HSIC 1.2V mode	1.15V	-	1.30V
NVCC_RGMII in RGMII 1.5V mode	1.43V	-	1.58V
NVCC_1.8V mode	1.70V	-	1.90V
NVCC_RGMII in RGMII 2.5V mode	2.25V	-	2.625V

As shown in the table above, the supplies have a wide operating range. In order to provide the most cost-effective and flexible solution for a given use-case, the supplies listed in the table need to be provided by the carrier board integrating the ConnectCore for i.MX6 module. However, PMIC power domains 3.3V - and LDO3/4/6/7/8 options - are dedicated power sources for supplying i.MX6 power domains.

The MCU - assist specific power domain (LDO3_MCA) available on the ConnectCore for i.MX6 LGA pads is a power supply output powering the on-module Kinetis processor.

The following diagram outlines the power supply approach of the ConnectCore for i.MX6. Inputs are marked red, blue marks outputs.

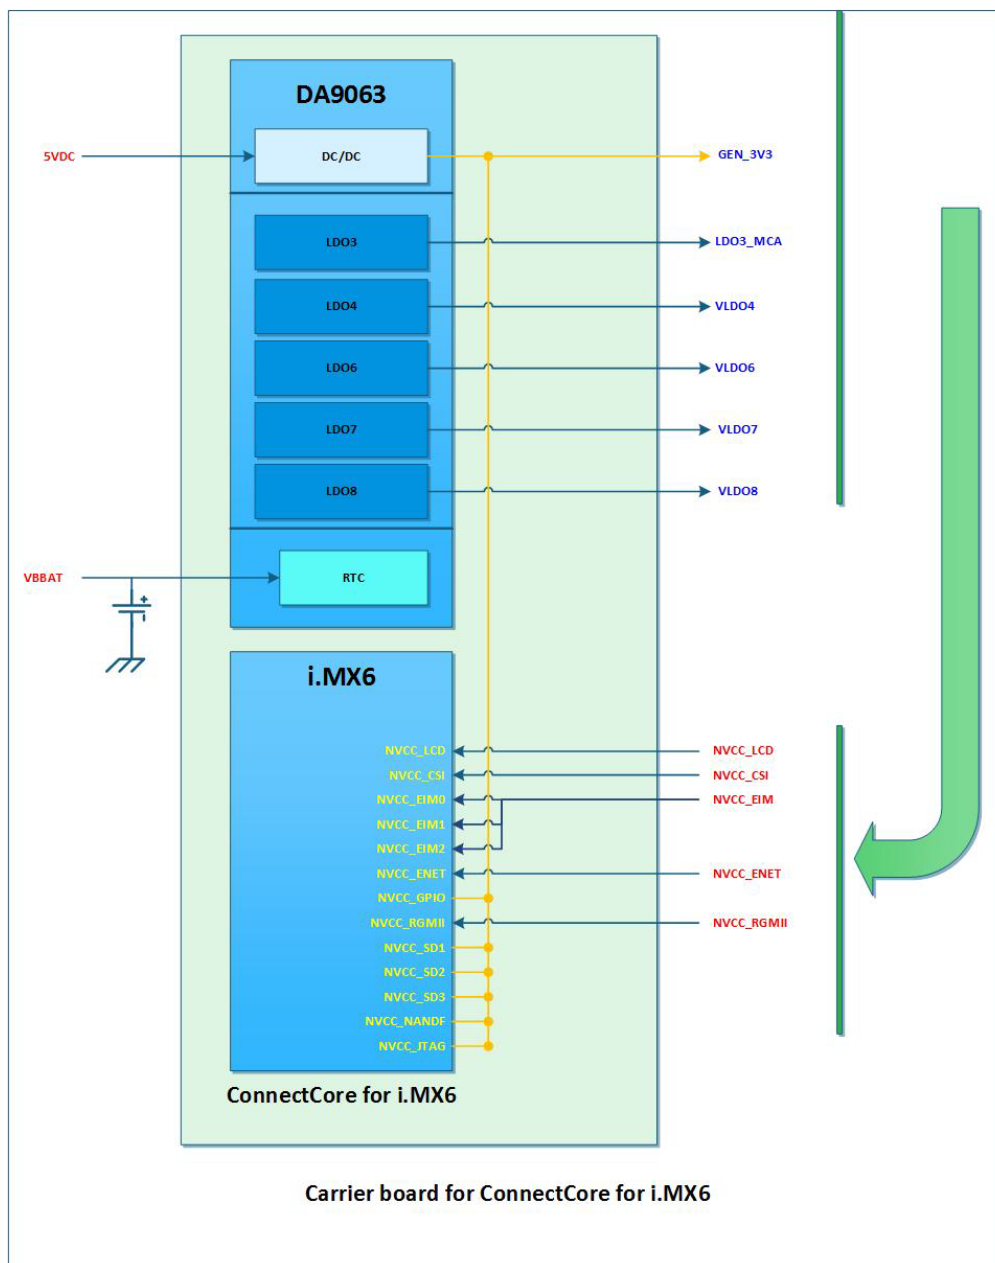

Bootstrap

The ConnectCore 6 is configured by default to boot in “Internal boot” mode. See the following table:

BOOT_MODE [1:0]	Boot type
00	Boot from fuses
01	Serial Downloader
10	Internal Boot (default)
11	Reserved

Note 10K pull-up populated on BOOT_MODE1
10K pull-down populated on BOOT_MODE0

By default, the boot media configured on the ConnectCore for i.MX6 module is the on-module eMMC. This is achieved by having the following resistors populated on the module:

- 10K pull-down on EIM_DA4 (BOOT_CFG1[4])
- 10K pull-up on EIM_DA5 (BOOT_CFG1[5])
- 10K pull-up on EIM_DA5 (BOOT_CFG1[6])
- 10K pull-down on EIM_DA7 (BOOT_CFG1[7])
- 10K pull-up on EIM_DA11 (BOOT_CFG2[3])
- 10K pull-up on EIM_DA12 (BOOT_CFG2[4])

When selecting “Internal Boot”, bootstrap pins shall be protected to insure a proper boot process. “Internal Boot” has the benefit that multiple boot media can be supported. For mass production, Digi recommends to use “Boot from fuses” for more security.

For booting from the on-module eMMC, following resistors must be populated on the carrier board:


ConnectCore 6 Signal (pad)	Boot Configuration	Resistor	Comment
EIM_DA13 (V20)	BOOT_CFG2[5]	1K pull-up to NVCC_EIM	Selecting 4-bit bus width
EIM_DA14 (W21)	BOOT_CFG2[6]	1K pull-down	Selecting 4-bit bus width



CAUTION! Make sure that EIM_EB3 (pad AA18) is not pulled high during boot. Pulling this signal high enables an infinite loop at start of boot ROM. This feature is exclusively used for debugging purposes.

Module Pinout of the ConnectCore 6

The module has a LGA pad structure based on 400 pads. See the following diagram for the general layout. It shows the top view of the module pinouts.

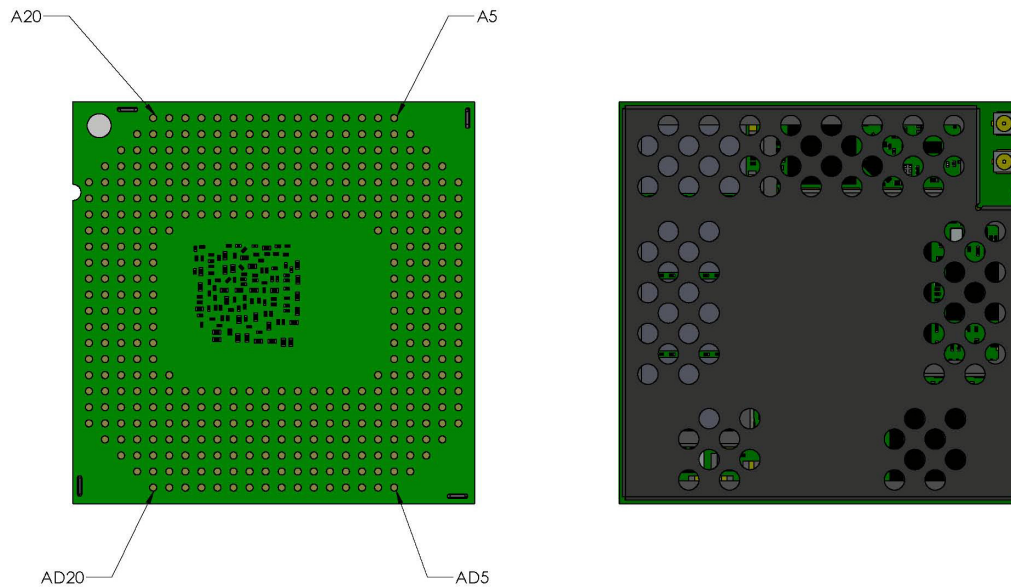

ConnectCore 6 Pinout Information

The following table provides pinout information of the ConnectCore for i.MX6 module.

Additional timing and electrical information can be found in either Freescale i.MX6 processor datasheet (www.freescale.com) or in Dialog DA9063 product datasheet (www.dialog-semiconductor.com).

LGA pad	Pad name	Multiplexing	IO type	Comments
A5	CSI0_MCLK	ALT0: IPU1_CSI0_HSYNC ALT1: ALT2: ALT3: CCM_CLKO1 ALT4: ALT5: GPIO5_IO19 ALT6: ALT: ARM_TRACE_CTL	NVCC_CSI	
A6	CSI0_DAT11	ALT0: IPU1_CSI0_DATA11 ALT1: AUD3_RXFS ALT2: ECSPI2_SS0 ALT3: UART1_RX_DATA ALT4: ALT5: GPIO5_IO29 ALT6: ALT7: ARM_TRACE08	NVCC_CSI	Connected on module to MCA processor
A7	CSI0_DAT17	ALT0: IPU1_CSI0_DATA17 ALT1: EIM_DATA13 ALT2: ALT3: UART4_CTS_B ALT4: ALT5: GPIO6_IO03 ALT6: ALT7: ARM_TRACE14	NVCC_CSI	
A8	GND		-	
A9	HDMI_D0_N		HDMI_VPH	
A10	GND		-	
A11	CSI_CLK0_P		NVCC_MIPI	
A12	GND		-	
A13	CSI_D1_N		NVCC_MIPI	
A14	PCIE_RX_N		PCIE_VPH	
A15	PCIE_TX_N		PCIE_VPH	
A16	CLK2_P		VDD_HIGH_CA P	

LGA pad	Pad name	Multiplexing	IO type	Comments
A17	GND		-	
A18	CLK1_P		VDD_HIGH_CAP	
A19	MLB_DP		VDD_HIGH_CAP	
A20	MLB_DN		VDD_HIGH_CAP	
B4	LVDS0_TX2_P		NVCC_LVDS_2P5	
B5	GND		-	
B6	CSI0_DAT14	ALT0: IPU1_CSI0_DATA14 ALT1: EIM_DATA10 ALT2: ALT3: UART5_TX_DATA ALT4: ALT5: GPIO6_IO00 ALT6: ALT7: ARM_TRACE11	NVCC_CSI	
B7	CSI0_DAT4	ALT0: IPU1_CSI0_DATA04 ALT1: EIM_DATA02 ALT2: ECSPI1_SCLK ALT3: KEY_COL5 ALT4: AUD3_TXC ALT5: GPIO5_IO22 ALT6: ALT7: ARM_TRACE01	NVCC_CSI	
B8	HDMI_D1_N		HDMI_VPH	
B9	HDMI_D0_P		HDMI_VPH	
B10	DSI_D0_P		NVCC_MIPI	
B11	CSI_CLK0_N		NVCC_MIPI	
B12	CSI_D2_N		NVCC_MIPI	
B13	CSI_D1_P		NVCC_MIPI	
B14	PCIE_RX_P		PCIE_VPH	
B15	PCIE_TX_P		PCIE_VPH	

LGA pad	Pad name	Multiplexing	IO type	Comments
B16	CLK2_N		VDD_HIGH_CAP	
B17	GND		-	
B18	CLK1_N		VDD_HIGH_CAP	
B19	GND		-	
B20	GND		-	
B21	SD3_CLK/ BT_UART_RTS	ALT0: SD3_CLK ALT1: UART2_RTS_B ALT2: FLEXCAN1_RX ALT3: ALT4: ALT5: GPIO7_IO03 ALT6: ALT7:	NVCC_SD3 (GEN_3V3)	Connected to Bluetooth module
C3	KEY_COL3	ALT0: ECSPI1_SS3 ALT1: ENET_CRS ALT2: HDMI_TX_DDC_SCL ALT3: KEY_COL3 ALT4: I2C2_SCL ALT5: GPIO4_IO12 ALT6: SPDIF_IN ALT7:	NVCC_GPIO (GEN_3V3)	Connected to MCA processor and PMIC. Not recommended as main I2C port. 4,7K pull-up on module.
C4	LVDS0_TX2_N		NVCC_LVDS_2 P5	
C5	CSI0_DAT6	ALT0: IPU1_CSI0_DATA06 ALT1: EIM_DATA04 ALT2: ECSPI1_MISO ALT3: KEY_COL6 ALT4: AUD3_TXFS ALT5: GPIO5_IO24 ALT6: ALT7: ARM_TRACE03	NVCC_CSI	

LGA pad	Pad name	Multiplexing	IO type	Comments
C6	CSI0_DAT13	ALT0: IPU1_CSI0_DATA13 ALT1: EIM_DATA09 ALT2: ALT3: UART4_RX_DATA ALT4: ALT5: GPIO5_IO31 ALT6: ALT7: ARM_TRACE10	NVCC_CSI	
C7	CSI0_DAT5	ALT0: IPU1_CSI0_DATA05 ALT1: EIM_DATA03 ALT2: ECSPI1_MOSI ALT3: KEY_ROW5 ALT4: AUD3_TXD ALT5: GPIO5_IO23 ALT6: ALT7: ARM_TRACE02	NVCC_CSI	
C8	HDMI_D1_P		HDMI_VPH	
C9	GND		-	
C10	DSI_D0_N		NVCC_MIPI	
C11	GND		-	
C12	CSI_D2_P		NVCC_MIPI	
C13	GND		-	
C14	GND		-	
C15	GND		-	
C16	USB_H1_DN		VDD_USB_CAP	
C17	TAMPER		VDD_SNVIS_IN	
C18	Reserved		-	
C19	MLB_SP		VDD_HIGH_CAP	
C20	MLB_SN		VDD_HIGH_CAP	

LGA pad	Pad name	Multiplexing	IO type	Comments
C21	SD3_DAT7	ALT0: SD3_DATA7 ALT1: UART1_TX_DATA ALT2: ALT3: ALT4: ALT5: GPIO6_IO17 ALT6: ALT7:	NVCC_SD3 (GEN_3V3)	
C22	SD3_DAT4/ BT_UART_RXD	ALT0: SD3_DATA4 ALT1: UART2_RX_DATA ALT2: ALT3: ALT4: ALT5: GPIO7_IO01 ALT6: ALT7:	NVCC_SD3 (GEN_3V3)	Connected to Bluetooth module
D2	KEY_ROW4	ALT0: FLEXCAN2_RX ALT1: IPU1_SISG5 ALT2: USB_OTG_PWR ALT3: KEY_ROW4 ALT4: UART5_CTS_B ALT5: GPIO4_IO15 ALT6: ALT7:	NVCC_GPIO (GEN_3V3)	
D3	KEY_ROW1	ALT0: ECSP1_SS0 ALT1: ENET_COL ALT2: AUD5_RXD ALT3: KEY_ROW1 ALT4: UART5_RX_DATA ALT5: GPIO4_IO09 ALT6: SD2_VSELECT ALT7:	NVCC_GPIO (GEN_3V3)	
D4	GND		-	

LGA pad	Pad name	Multiplexing	IO type	Comments
D5	CSI0_DAT9	ALT0: IPU1_CSI0_DATA09 ALT1: EIM_DATA07 ALT2: ECSPI2_MOSI ALT3: KEY_ROW7 ALT4: I2C1_SCL ALT5: GPIO5_IO27 ALT6: ALT7: ARM_TRACE06	NVCC_CSI	Connected on module to MCA processor
D6	CSI0_DAT8	ALT0: IPU1_CSI0_DATA08 ALT1: EIM_DATA06 ALT2: ECSPI2_SCLK ALT3: KEY_COL7 ALT4: I2C1_SDA ALT5: GPIO5_IO26 ALT6: ALT7: ARM_TRACE05	NVCC_CSI	Connected on module to MCA processor
D7	HDMI_DDCCEC		HDMI_VPH	
D8	GND		-	
D9	DSI_D1_P		NVCC_MIPI	
D10	GND		-	
D11	CSI_D3_P		NVCC_MIPI	
D12	Reserved		-	
D13	#BT_DISABLE		WLAN/BT_3V3	
D14	JTAG_TDI		NVCC_JTAG (GEN_3V3)	
D15	#JTAG_TRST		NVCC_JTAG (GEN_3V3)	
D16	USB_H1_DP		VDD_USB_CAP	
D17	TEST_MODE		VDD_SNVS_IN	10K pull-down on module
D18	ON/OFF		VDD_SNVS_IN	Must be connected to a power button
D19	SATA_TX_N		SATA_VPH	
D20	GND		-	

LGA pad	Pad name	Multiplexing	IO type	Comments
D21	SD3_DAT1	ALT0: SD3_DATA1 ALT1: UART1_RTS_B ALT2: FLEXCAN2_RX ALT3: ALT4: ALT5: GPIO7_IO05 ALT6: ALT7:	NVCC_SD3 (GEN_3V3)	
D22	SD3_RST	ALT0: SD3_RESET ALT1: UART3_RTS_B ALT2: ALT3: ALT4: ALT5: GPIO7_IO08 ALT6: ALT7:	NVCC_SD3 (GEN_3V3)	
D23	SD3_DAT5/ BT_UART_TXD	ALT0: SD3_DATA5 ALT1: UART2_TX_DATA ALT2: ALT3: ALT4: ALT5: GPIO7_IO00 ALT6: ALT7:	NVCC_SD3 (GEN_3V3)	Connected to Bluetooth module
E1	LVDS1_CLK_N		NVCC_LVDS_2 P5	
E2	KEY_ROW0	ALT0: ECSP11_MOSI ALT1: ENET_TX_DATA3 ALT2: AUD5_TXD ALT3: KEY_ROW0 ALT4: UART4_RX_DATA ALT5: GPIO4_IO07 ALT6: DCIC2_OUT ALT7:	NVCC_GPIO (GEN_3V3)	

LGA pad	Pad name	Multiplexing	IO type	Comments
E3	KEY_COL1	ALT0: ECSP11_MISO ALT1: ENET_MDIO ALT2: AUD5_TXFS ALT3: KEY_COL1 ALT4: UART5_TX_DATA ALT5: GPIO4_IO08 ALT6: SD1_VSELECT ALT7:	NVCC_GPIO (GEN_3V3)	
E4	LVDS0_TX1_P		NVCC_LVDS_2 P5	
E5	CSI0_DATA_EN	ALT0: IPU1_CSI0_DATA_EN ALT1: EIM_DATA00 ALT2: ALT3: ALT4: ALT5: GPIO5_IO20 ALT6: ALT7: ARM_TRACE_CLK	NVCC_CSI	
E6	CSI0_DAT15	ALT0: IPU1_CSI0_DATA15 ALT1: EIM_DATA11 ALT2: ALT3: UART5_RX_DATA ALT4: ALT5: GPIO6_IO01 ALT6: ALT7: ARM_TRACE12	NVCC_CSI	
E7	GND		-	
E8	HDMI_CLK_N		HDMI_VPH	
E9	DSI_D1_N		NVCC_MIPI	
E10	DSI_CLK0_N		NVCC_MIPI	
E11	CSI_D3_N		NVCC_MIPI	
E12	Reserved		-	
E13	Reserved		-	

LGA pad	Pad name	Multiplexing	IO type	Comments
E14	JTAG_TDO		NVCC_JTAG (GEN_3V3)	
E15	Reserved		-	
E16	GND		-	
E17	BOOT_MODE0		VDD_SNV5_IN	10K pull-down on module
E18	#POR		VDD_SNV5_IN	
E19	SATA_TX_P		SATA_VPH	
E20	GEN_3V3		NVCC_SD3 (GEN_3V3)	
E21	SD3_DAT6	ALT0: SD3_DATA6 ALT1: UART1_RX_DATA ALT2: ALT3: ALT4: ALT5: GPIO6_IO18 ALT6: ALT7:	NVCC_SD3 (GEN_3V3)	
E22	NANDF_CLE/ BT_WAKE	ALT0: NAND_CLE ALT1: IPU2_SISG4 ALT2: ALT3: ALT4: ALT5: GPIO6_IO07 ALT6: ALT7:	NVCC_NANDF (GEN_3V3)	
E23	SD3_CMD/ BT_UART_CTS	ALT0: SD3_CMD ALT1: UART2_CTS_B ALT2: FLEXCAN1_TX ALT3: ALT4: ALT5: GPIO7_IO02 ALT6: ALT7:	NVCC_SD3 (GEN_3V3)	

LGA pad	Pad name	Multiplexing	IO type	Comments
E24	SD3_DAT2	ALT0: SD3_DATA2 ALT1: ALT2: ALT3: ALT4: ALT5: GPIO7_IO06 ALT6: ALT7:	NVCC_SD3 (GEN_3V3)	
F1	LVDS1_CLK_P		NVCC_LVDS_2 P5	
F2	KEY_ROW3	ALT0: ALT1: ASRC_EXT_CLK ALT2: HDMI_TX_DDC_SDA ALT3: KEY_ROW3 ALT4: I2C2_SDA ALT5: GPIO4_IO13 ALT6: SD1_VSELECT ALT7:	NVCC_GPIO (GEN_3V3)	Connected to MCA processor and PMIC. Not recommended as main I2C port. 4,7K pull-up on module.
F3	GPIO_8	ALT0: ESAI_TX5_RX0 ALT1: XTALOSC_REF_CLK_32K ALT2: EPIT2_OUT ALT3: FLEXCAN1_RX ALT4: UART2_RX_DATA ALT5: GPIO1_IO08 ALT6: SPDIF_SR_CLK ALT7: USB_OTG_PWR_CTL_WAKE	NVCC_GPIO (GEN_3V3)	
F4	LVDS0_TX1_N		NVCC_LVDS_2 P5	
F5	GND		-	

LGA pad	Pad name	Multiplexing	IO type	Comments
F6	CSI0_DAT18	ALT0: IPU1_CSI0_DATA18 ALT1: EIM_DATA14 ALT2: ALT3: UART5_RTS_B ALT4: ALT5: GPIO6_IO04 ALT6: ALT7: ARM_TRACE15	NVCC_CSI	
F7	HDMI_D2_N		HDMI_VPH	
F8	HDMI_CLK_P		HDMI_VPH	
F9	GND		-	
F10	DSI_CLK0_P		NVCC_MIPI	
F11	GND		-	
F12	GND		-	
F13	JTAG_TCK		NVCC_JTAG (GEN_3V3)	
F14	JTAG_TMS		NVCC_JTAG (GEN_3V3)	
F15	BOOT_MODE1		VDD_SNVIS_IN	10K pull-up to VDD_SNVIS_IN on module
F16	USB_H1_VBUS		-	
F17	MLB_CP		-	
F18	MLB_CN		-	
F19	GND		-	
F20	SD3_DAT0	ALT0: SD3_DATA0 ALT1: UART1_CTS_B ALT2: FLEXCAN2_TX ALT3: ALT4: ALT5: GPIO7_IO04 ALT6: ALT7:	NVCC_SD3 (GEN_3V3)	

LGA pad	Pad name	Multiplexing	IO type	Comments
F21	NANDF_CS0	ALT0: NAND_CE0_B ALT1: ALT2: ALT3: ALT4: ALT5: GPIO6_IO11 ALT6: ALT7:	NVCC_NANDF (GEN_3V3)	
F22	#NANDF_WP	ALT0: NAND_WP_B ALT1: IPU2_SISG5 ALT2: ALT3: ALT4: ALT5: GPIO6_IO09 ALT6: ALT7:	NVCC_NANDF (GEN_3V3)	
F23	NANDF_CS3	ALT0: NAND_CE3_B ALT1: IPU1_SISG1 ALT2: ESAI_TX1 ALT3: EIM_ADDR26 ALT4: ALT5: GPIO6_IO16 ALT6: IPU2_SISG1 ALT7:	NVCC_NANDF (GEN_3V3)	
F24	SD3_DAT3	ALT0: SD3_DATA3 ALT1: UART3_CTS_B ALT2: ALT3: ALT4: ALT5: GPIO7_IO07 ALT6: ALT7:	NVCC_SD3 (GEN_3V3)	
G1	GND		-	

LGA pad	Pad name	Multiplexing	IO type	Comments
G2	GPIO_0	ALT0: CCM_CLKO1 ALT1: ALT2: KEY_COL5 ALT3: ASRC_EXT_CLK ALT4: EPIT1_OUT ALT5: GPIO1_IO00 ALT6: USB_H1_PWR ALT7: SNVS_VIO_5	NVCC_GPIO (GEN_3V3)	
G3	GPIO_2	ALT0: ESAI_TX_FS ALT1: ALT2: KEY_ROW6 ALT3: ALT4: ALT5: GPIO1_IO02 ALT6: SD2_WP ALT7: MLB_DATA	NVCC_GPIO (GEN_3V3)	
G4	GND		-	
G5	CSI0_PIXCLK	ALT0: IPU1_CSI0_PIXCLK ALT1: ALT2: ALT3: ALT4: ALT5: GPIO5_IO18 ALT6: ALT7: ARM_EVENTO	NVCC_CSI	
G6	CSI0_DAT19	ALT0: IPU1_CSI0_DATA19 ALT1: EIM_DATA15 ALT2: ALT3: UART5_CTS_B ALT4: ALT5: GPIO6_IO05 ALT6: ALT7:	NVCC_CSI	
G7	HDMI_D2_P		HDMI_VPH	
G8	GND		-	

LGA pad	Pad name	Multiplexing	IO type	Comments
G9	HDMI_HPD		HDMI_VPH	
G10	GND		-	
G11	CSI_D0_P		NVCC_MIP1	
G12	CSI_D0_M		NVCC_MIP1	
G13	JTAG_MOD		NVCC_JTAG (GEN_3V3)	
G14	USB_OTG_VBUS		USB_OTG_VBUS	
G15	#USB_OTG_CHD		VDD_USB_CAP	
G16	USB_OTG_DN		VDD_USB_CAP	
G17	USB_OTG_DP		VDD_USB_CAP	
G18	GND		-	
G19	SATA_RX_N		SATA_VPH	
G20	GEN_3V3		NVCC_NANDF	
G21	NANDF_D2	ALT0: NAND_DATA02 ALT1: SD1_DATA6 ALT2: ALT3: ALT4: ALT5: GPIO2_IO02 ALT6: ALT7:	NVCC_NANDF (GEN_3V3)	
G22	NANDF_D6	ALT0: NAND_DATA06 ALT1: SD2_DATA6 ALT2: ALT3: ALT4: ALT5: GPIO2_IO06 ALT6: ALT7:	NVCC_NANDF (GEN_3V3)	

LGA pad	Pad name	Multiplexing	IO type	Comments
G23	NANDF_D3	ALT0: NAND_DATA03 ALT1: SD1_DATA7 ALT2: ALT3: ALT4: ALT5: GPIO2_IO03 ALT6: ALT7:	NVCC_NANDF (GEN_3V3)	
G24	NANDF_ALE	ALT0: NAND_ALE ALT1: SD4_RESET ALT2: ALT3: ALT4: ALT5: GPIO6_IO08 ALT6: ALT7:	NVCC_NANDF (GEN_3V3)	
H1	LVDS1_TX0_N		NVCC_LVDS_2 P5	
H2	KEY_ROW2	ALT0: ECSP1_SS2 ALT1: ENET_TX_DATA2 ALT2: FLEXCAN1_RX ALT3: KEY_ROW2 ALT4: SD2_VSELECT ALT5: GPIO4_IO11 ALT6: HDMI_TX_CEC_LINE ALT7:	NVCC_GPIO (GEN_3V3)	
H3	GPIO_9	ALT0: ESAI_RX_FS ALT1: WDOG1_B ALT2: KEY_COL6 ALT3: CCM_REF_EN_B ALT4: PWM1_OUT ALT5: GPIO1_IO09 ALT6: SD1_WP ALT7:	NVCC_GPIO (GEN_3V3)	
H4	LVDS0_TX0_P		NVCC_LVDS_2 P5	

LGA pad	Pad name	Multiplexing	IO type	Comments
H5	GND		-	
H6	CSI0_DAT16	ALT0: IPU1_CSI0_DATA16 ALT1: EIM_DATA12 ALT2: ALT3: UART4_RTS_B ALT4: ALT5: GPIO6_IO02 ALT6: ALT7: ARM_TRACE13	NVCC_CSI	
H19	SATA_RX_P		SATA_VPH	
H20	GND		-	
H21	NANDF_CS1/ #MCA_INT	ALT0: NAND_CE1_B ALT1: SD4_VSELECT ALT2: SD3_VSELECT ALT3: ALT4: ALT5: GPIO6_IO14 ALT6: ALT7:	NVCC_NANDF (GEN_3V3)	Connected to MCA processor
H22	NANDF_D1	ALT0: NAND_DATA01 ALT1: SD1_DATA5 ALT2: ALT3: ALT4: ALT5: GPIO2_IO01 ALT6: ALT7:	NVCC_NANDF (GEN_3V3)	
H23	NANDF_D7	ALT0: NAND_DATA07 ALT1: SD2_DATA7 ALT2: ALT3: ALT4: ALT5: GPIO2_IO07 ALT6: ALT7:	NVCC_NANDF (GEN_3V3)	

LGA pad	Pad name	Multiplexing	IO type	Comments
H24	NANDF_CS2	ALT0: NAND_CE2_B ALT1: IPU1_SISG0 ALT2: ESAI_TX0 ALT3: EIM_CRE ALT4: CCM_CLKO2 ALT5: GPIO6_IO15 ALT6: IPU2_SISG0 ALT7:	NVCC_NANDF (GEN_3V3)	
J1	LVDS1_TX0_P		NVCC_LVDS_2 P5	
J2	KEY_COL0	ALT0: ECSPI1_SCLK ALT1: ENET_RX_DATA3 ALT2: AUD5_TXC ALT3: KEY_COL0 ALT4: UART4_TX_DATA ALT5: GPIO4_IO06 ALT6: DCIC1_OUT ALT7:	NVCC_GPIO (GEN_3V3)	
J3	GPIO_6	ALT0: ESAI_TX_CLK ALT1: ALT2: I2C3_SDA ALT3: ALT4: ALT5: GPIO1_IO06 ALT6: SD2_LCTL ALT7: MLB_SIG	NVCC_GPIO (GEN_3V3)	
J4	LVDS0_TX0_N		NVCC_LVDS_2 P5	
J5	CSI0_VSYNC	ALT0: IPU1_CSI0_VSYNC ALT1: EIM_DATA01 ALT2: ALT3: ALT4: ALT5: GPIO5_IO21 ALT6: ALT7: ARM_TRACE00	NVCC_CSI	

LGA pad	Pad name	Multiplexing	IO type	Comments
J20	GEN_3V3		NVCC_SD1	
J21	SD1_DAT2	ALT0: SD1_DATA2 ALT1: ECSPi5_SS1 ALT2: GPT_COMPARE2 ALT3: PWM2_OUT ALT4: WDOG1_B ALT5: GPIO1_IO19 ALT6: WDOG1_RESET_B_DEB ALT7:	NVCC_SD1 (GEN_3V3)	
J22	SD1_DAT1	ALT0: SD1_DATA1 ALT1: ECSPi5_SS0 ALT2: PWM3_OUT ALT3: GPT_CAPTURE2 ALT4: ALT5: GPIO1_IO17 ALT6: ALT7:	NVCC_SD1 (GEN_3V3)	
J23	SD1_CMD	ALT0: SD1_CMD ALT1: ECSPi5_MOSI ALT2: PWM4_OUT ALT3: GPT_COMPARE1 ALT4: ALT5: GPIO1_IO18 ALT6: ALT7:	NVCC_SD1 (GEN_3V3)	
J24	NANDF_D0	ALT0: NAND_DATA00 ALT1: SD1_DATA4 ALT2: ALT3: ALT4: ALT5: GPIO2_IO00 ALT6: ALT7:	NVCC_NANDF (GEN_3V3)	
K1	GND		-	

LGA pad	Pad name	Multiplexing	IO type	Comments
K2	KEY_COL2	ALT0: ECSPi1_SS1 ALT1: ENET_RX_DATA2 ALT2: FLEXCAN1_TX ALT3: KEY_COL2 ALT4: ENET_MDC ALT5: GPIO4_IO10 ALT6: USB_H1_PWR_CTL_WAKE ALT7:	NVCC_GPIO (GEN_3V3)	
K3	GPIO_1	ALT0: ESAI_RX_CLK ALT1: WDOG2_B ALT2: KEY_ROW5 ALT3: USB_OTG_ID ALT4: PWM2_OUT ALT5: GPIO1_IO01 ALT6: SD1_CD_B ALT7:	NVCC_GPIO (GEN_3V3)	
K4	GND		-	
K5	CSI0_DAT10	ALT0: IPU1_CSI0_DATA10 ALT1: AUD3_RXC ALT2: ECSPi2_MISO ALT3: UART1_TX_DATA ALT4: ALT5: GPIO5_IO28 ALT6: ALT7: ARM_TRACE07	NVCC_CSI	
K20	GEN_3V3		NVCC_SD2	
K21	SD2_DAT1	ALT0: SD2_DATA1 ALT1: ECSPi5_SS0 ALT2: EIM_CS2 ALT3: AUD4_TXFS ALT4: KEY_COL7 ALT5: GPIO1_IO14 ALT6: ALT7:	NVCC_SD2 (GEN_3V3)	

LGA pad	Pad name	Multiplexing	IO type	Comments
K22	SD2_CLK	ALT0: SD2_CLK ALT1: ECSPI5_SCLK ALT2: KEY_COL5 ALT3: AUD4_RXFS ALT4: ALT5: GPIO1_IO10 ALT6: ALT7:	NVCC_SD2 (GEN_3V3)	
K23	SD2_DAT3	ALT0: SD2_DATA3 ALT1: ECSPI5_SS3 ALT2: KEY_COL6 ALT3: AUD4_TXC ALT4: ALT5: GPIO1_IO12 ALT6: ALT7:	NVCC_SD2 (GEN_3V3)	
K24	NANDF_D4	ALT0: NAND_DATA04 ALT1: SD2_DATA4 ALT2: ALT3: ALT4: ALT5: GPIO2_IO04 ALT6: ALT7:	NVCC_NANDF (GEN_3V3)	
L1	LVDS1_TX1_P		NVCC_LVDS_2 P5	
L2	KEY_COL4	ALT0: FLEXCAN2_TX ALT1: IPU1_SISG4 ALT2: USB_OTG_OC ALT3: KEY_COL4 ALT4: UART5_RTS_B ALT5: GPIO4_IO14 ALT6: ALT7:	NVCC_GPIO (GEN_3V3)	

LGA pad	Pad name	Multiplexing	IO type	Comments
L3	GPIO_4	ALT0: ESAI_TX_HF_CLK ALT1: ALT2: KEY_COL7 ALT3: ALT4: ALT5: GPIO1_IO04 ALT6: SD2_CD_B ALT7:	NVCC_GPIO (GEN_3V3)	
L4	LVDS0_CLK_P		NVCC_LVDS_2 P5	
L5	CSI0_DAT12	ALT0: IPU1_CSI0_DATA12 ALT1: EIM_DATA08 ALT2: ALT3: UART4_TX_DATA ALT4: ALT5: GPIO5_IO30 ALT6: ALT7: ARM_TRACE09	NVCC_CSI	
L20	SD1_DAT3	ALT0: SD1_DATA3 ALT1: ECSPI5_SS2 ALT2: GPT_COMPARE3 ALT3: PWM1_OUT ALT4: WDOG2_B ALT5: GPIO1_IO21 ALT6: WDOG2_RESET_B_DEB ALT7:	NVCC_SD1 (GEN_3V3)	
L21	SD1_CLK	ALT0: SD1_CLK ALT1: ECSPI5_SCLK ALT2: ALT3: GPT_CLKIN ALT4: ALT5: GPIO1_IO20 ALT6: ALT7:	NVCC_SD1 (GEN_3V3)	
L22	GND		-	

LGA pad	Pad name	Multiplexing	IO type	Comments
L23	MCA_SWD_CLK	ALT0: - ALT1: PTA0 ALT2: - ALT3: TMP0_CH5 ALT4: - ALT5: - ALT6: - ALT7: SWD_CLK	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.
L24	NANDF_D5	ALT0: NAND_DATA05 ALT1: SD2_DATA5 ALT2: ALT3: ALT4: ALT5: GPIO2_IO05 ALT6: ALT7:	NVCC_NANDF (GEN_3V3)	
M1	LVDS1_TX1_N		NVCC_LVDS_2 P5	
M2	GPIO_19	ALT0: KEY_COL5 ALT1: ENET_1588_EVENT0_OUT ALT2: SPDIF_OUT ALT3: CCM_CLKO1 ALT4: ECSPI1_RDY ALT5: GPIO4_IO05 ALT6: ENET_TX_ER ALT7:	NVCC_GPIO (GEN_3V3)	
M3	GPIO_16	ALT0: ESAI_TX3_RX2 ALT1: ENET_1588_EVENT2_IN ALT2: ENET_REF_CLK ALT3: SD1_LCTL ALT4: SPDIF_IN ALT5: GPIO7_IO11 ALT6: I2C3_SDA ALT7: JTAG_DE_B	NVCC_GPIO (GEN_3V3)	
M4	LVDS0_CLK_N		NVCC_LVDS_2 P5	

LGA pad	Pad name	Multiplexing	IO type	Comments
M5	CSIO_DAT7	ALT0: IPU1_CSI0_DATA07 ALT1: EIM_DATA05 ALT2: ECSPI1_SS0 ALT3: KEY_ROW6 ALT4: AUD3_RXD ALT5: GPIO5_IO25 ALT6: ALT7: ARM_TRACE04	NVCC_CSI	
M20	SD2_CMD	ALT0: SD2_CMD ALT1: ECSPI5_MOSI ALT2: KEY_ROW5 ALT3: AUD4_RXC ALT4: ALT5: GPIO1_IO11 ALT6: ALT7:	NVCC_SD2 (GEN_3V3)	
M21	MCA_IO12	ALT0: - ALT1: PTC5/LLWU_P9 ALT2: SPI0_SCK ALT3: LPTMR0_ALT2 ALT4: - ALT5: - ALT6: CMP0_OUT ALT7: -	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.
M22	LDO3_MCA		LDO3_MCA	
M23	MCA_SWD_DIO	ALT0: - ALT1: PTA3 ALT2: I2C1_SCL ALT3: TPM0_CH0 ALT4: - ALT5: - ALT6: - ALT7: SWD_DIO	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.

LGA pad	Pad name	Multiplexing	IO type	Comments
M24	NANDF_RB0	ALT0: NAND_READY ALT1: IPU2_DIO_PIN01 ALT2: ALT3: ALT4: ALT5: GPIO6_IO10 ALT6: ALT7:	NVCC_NANDF (GEN_3V3)	
N1	GND		-	
N2	GPIO_18	ALT0: ESAI_TX1 ALT1: ENET_RX_CLK ALT2: SD3_VSELECT ALT3: SDMA_EXT_EVENT1 ALT4: ASRC_EXT_CLK ALT5: GPIO7_IO13 ALT6: SNVS_VIO_5_CTL ALT7:	NVCC_GPIO (GEN_3V3)	
N3	VCC_LICELL		VCC_LICELL	
N4	GND		-	
N5	GEN_3V3		NVCC_GPIO	
N20	MCA_IO/USB0_P	ALT0: ADC0_SE1 ALT1: PTE16 ALT2: SPI0_PCS0 ALT3: UART2_TX ALT4: TPM_CLKIN0 ALT5: - ALT6: - ALT7: -	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.
N21	MCA_IO13	ALT0: CMP0_IN0 ALT1: PTC6/LLWU_P10 ALT2: SPI0_MOSI ALT3: EXTRG_IN ALT4: - ALT5: SPI0_MISO ALT6: - ALT7: -	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.

LGA pad	Pad name	Multiplexing	IO type	Comments
N22	MCA_IO7	ALT0: - ALT1: PTB16 ALT2: SPI1_MOSI ALT3: UART0_RX ALT4: TPM_CLKIN0 ALT5: SPI1_MISO ALT6: - ALT7: -	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.
N23	#MCA_RESET	ALT0: RESET_b ALT1: PTA20 ALT2: - ALT3: - ALT4: - ALT5: - ALT6: - ALT7: -	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.
N24	SD1_DAT0	ALT0: SD1_DATA0 ALT1: ECSPI5_MISO ALT2: ALT3: GPT_CAPTURE1 ALT4: ALT5: GPIO1_IO16 ALT6: ALT7:	NVCC_SD1 (GEN_3V3)	
P1	LVDS1_TX2_N		NVCC_LVDS_2 P5	
P2	ENET_CRS_DV	ALT0: ENET_RX_EN ALT1: ESAI_TX_CLK ALT2: SPDIF_EXT_CLK ALT3: ALT4: ALT5: GPIO1_IO25 ALT6: ALT7:	NVCC_ENET	

LGA pad	Pad name	Multiplexing	IO type	Comments
P3	GPIO_7	ALT0: ESAI_TX4_RX1 ALT1: ECSPi5_RDY ALT2: EPIT1_OUT ALT3: FLEXCAN1_TX ALT4: UART2_TX_DATA ALT5: GPIO1_IO07 ALT6: SPDIF_LOCK ALT7: USB_OTG_HOST_MODE	NVCC_GPIO (GEN_3V3)	
P4	LVDS0_TX3_P		NVCC_LVDS_2 P5	
P5	NVCC_CSI		NVCC_CSI	
P20	MCA_IO/USB0_N	ALT0: ADC0_SE5a ALT1: PTE17 ALT2: SPI0_SCK ALT3: UART2_RX ALT4: TPM_CLKIN1 ALT5: - ALT6: LPTMR0_ALT3 ALT7: -	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.
P21	MCA_IO14	ALT0: ADC0_SE6a ALT1: PTE19 ALT2: SPI0_MISO ALT3: - ALT4: I2C0_SCL ALT5: SPI0_MOSI ALT6: - ALT7: -	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.
P22	MCA_IO8	ALT0: - ALT1: PTB17 ALT2: SPI1_MISO ALT3: UART0_TX ALT4: TPM_CLKIN1 ALT5: SPI1_MOSI ALT6: - ALT7: -	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.

LGA pad	Pad name	Multiplexing	IO type	Comments
P23	MCA_IO1	ALT0: ADC0_SE4a ALT1: PTE21 ALT2: - ALT3: TPM1_CH1 ALT4: UART0_RX ALT5: - ALT6: - ALT7: -	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.
P24	SD2_DAT0	ALT0: SD2_DATA0 ALT1: ECSPI5_MISO ALT2: ALT3: AUD4_RXD ALT4: KEY_ROW7 ALT5: GPIO1_IO15 ALT6: DCIC2_OUT ALT7:	NVCC_SD2 (GEN_3V3)	
R1	LVDS1_TX2_P		NVCC_LVDS_2 P5	
R2	ENET_RX_ER	ALT0: USB_OTG_ID ALT1: ENET_RX_ER ALT2: ESAI_RX_HF_CLK ALT3: SPDIF_IN ALT4: ENET_1588_EVENT2_OUT ALT5: GPIO1_IO24 ALT6: ALT7:	NVCC_ENET	
R3	GPIO_5	ALT0: ESAI_TX2_RX3 ALT1: ALT2: KEY_ROW7 ALT3: CCM_CLKO1 ALT4: ALT5: GPIO1_IO05 ALT6: I2C3_SCL ALT7: ARM_EVENTI	NVCC_GPIO (GEN_3V3)	
R4	LVDS0_TX3_N		NVCC_LVDS_2 P5	

LGA pad	Pad name	Multiplexing	IO type	Comments
R5	NVCC_RGMII		NVCC_RGMII	
R20	MCA_IO19	ALT0: CMP0_IN1 ALT1: PTC7 ALT2: SPI0_MISO ALT3: - ALT4: - ALT5: SPI0_MOSI ALT6: - ALT7: -	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.
R21	MCA_IO16	ALT0: - ALT1: PTD4/LLWU_P14 ALT2: SPI1_PCS0 ALT3: UART2_RX ALT4: TPM0_CH4 ALT5: - ALT6: - ALT7: -	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.
R22	MCA_IO9	ALT0: ADC0_SE11 ALT1: PTC2 ALT2: I2C1_SDA ALT3: - ALT4: TPM0_CH1 ALT5: - ALT6: - ALT7: -	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.
R23	MCA_IO2	ALT0: ADC0_SE8 ALT1: PTB0/LLWU_P5 ALT2: I2C0_SCL ALT3: TPM1_CH0 ALT4: - ALT5: - ALT6: - ALT7: -	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.

LGA pad	Pad name	Multiplexing	IO type	Comments
R24	SD2_DAT2	ALT0: SD2_DATA2 ALT1: ECSPi5_SS1 ALT2: EIM_CS3 ALT3: AUD4_TXD ALT4: KEY_ROW6 ALT5: GPIO1_IO13 ALT6: ALT7:	NVCC_SD2 (GEN_3V3)	
T1	GND		-	
T2	GND		-	
T3	GPIO_3	ALT0: ESAI_RX_HF_CLK ALT1: ALT2: I2C3_SCL ALT3: XTALOSC_REF_CLK_24M ALT4: CCM_CLKO2 ALT5: GPIO1_IO03 ALT6: USB_H1_OC ALT7: MLB_CLK	NVCC_GPIO (GEN_3V3)	
T4	GND		-	
T5	GND		-	
T20	MCA_IO24	ALT0: XTAL0 ALT1: PTA19 ALT2: - ALT3: UART1_TX ALT4: TPM_CLKIN1 ALT5: - ALT6: LPTMR0_ALT1 ALT7: -	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.

LGA pad	Pad name	Multiplexing	IO type	Comments
T21	MCA_IO22	ALT0: ADC0_SE6b ALT1: PTD5 ALT2: SPI1_SCK ALT3: UART2_TX ALT4: TPM0_CH5 ALT5: - ALT6: - ALT7: -	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.
T22	MCA_IO10	ALT0: - ALT1: PTC3/LLWU_P7 ALT2: - ALT3: UART1_RX ALT4: TPM0_CH2 ALT5: CLKOUT ALT6: - ALT7: -	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.
T23	MCA_IO0	ALT0: ADC0_SE0 ALT1: PTE20 ALT2: - ALT3: TPM1_CH0 ALT4: UART0_TX ALT5: - ALT6: - ALT7: -	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.
T24	MCA_IO3	ALT0: ADC0_SE7b ALT1: PTD6/LLWU_P15 ALT2: SPI1_MOSI ALT3: UART0_RX ALT4: - ALT5: SPI1_MISO ALT6: - ALT7: -	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.
U1	LVDS1_TX3_N		NVCC_LVDS_2 P5	

LGA pad	Pad name	Multiplexing	IO type	Comments
U2	ENET_TXD0	ALT0: ALT1: ENET_TX_DATA0 ALT2: ESAI_TX4_RX1 ALT3: ALT4: ALT5: GPIO1_IO30 ALT6: ALT7:	NVCC_ENET	
U3	GND		-	
U4	RGMII_TXC	ALT0: USB_H2_DATA ALT1: RGMII_TXC ALT2: SPDIF_EXT_CLK ALT3: ALT4: ALT5: GPIO6_IO19 ALT6: ALT7: XTALOSC_REF_CLK_24M	NVCC_RGMII	
U5	RGMII_TD0	ALT0: HSI_TX_READY ALT1: RGMII_TD0 ALT2: ALT3: ALT4: ALT5: GPIO6_IO20 ALT6: ALT7:	NVCC_RGMII	
U6	DISP0_DAT21	ALT0: IPU1_DISP0_DATA21 ALT1: IPU2_DISP0_DATA21 ALT2: ECSPI1_MOSI ALT3: AUD4_TXD ALT4: ALT5: GPIO5_IO15 ALT6: ALT7:	NVCC_LCD	

LGA pad	Pad name	Multiplexing	IO type	Comments
U19	EIM_DA3	ALT0: EIM_DA03 ALT1: IPU1_DISP1_DATA06 ALT2: IPU2_CSI1_DATA06 ALT3: ALT4: ALT5: GPIO3_IO03 ALT6: ALT7: SRC_BOOT_CFG03	NVCC_EIM	
U20	EIM_DA0	ALT0: EIM_AD00 ALT1: IPU1_DISP1_DATA09 ALT2: IPU2_CSI1_DATA09 ALT3: ALT4: ALT5: GPIO3_IO00 ALT6: ALT7: SRC_BOOT_CFG00	NVCC_EIM	
U21	EIM_LBA	ALT0: EIM_LBA ALT1: IPU1_DI1_PIN17 ALT2: ECSPI2_SS1 ALT3: ALT4: ALT5: GPIO2_IO27 ALT6: ALT7: SRC_BOOT_CFG26	NVCC_EIM	
U22	MCA_IO11	ALT0: - ALT1: PTC4/LLWU_P8 ALT2: SPI0_PCS0 ALT3: UART1_TX ALT4: TPM0_CH3 ALT5: - ALT6: - ALT7: -	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.

LGA pad	Pad name	Multiplexing	IO type	Comments
U23	EIM_DA6	ALT0: EIM_AD06 ALT1: IPU1_DISP1_DATA03 ALT2: IPU2_CSI1_DATA03 ALT3: ALT4: ALT5: GPIO3_IO06 ALT6: ALT7: SRC_BOOT_CFG06	NVCC_EIM	10K pull-up to NVCC_EIM on module
U24	MCA_IO4	ALT0: ADC0_SE14 ALT1: PTC0 ALT2: - ALT3: EXTRG_IN ALT4: - ALT5: CMP0_OUT ALT6: - ALT7: -	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.
V1	LVDS1_TX3_P		NVCC_LVDS_2 P5	
V2	ENET_TXD1	ALT0: MLB_CLK ALT1: ENET_TX_DATA1 ALT2: ESAI_TX2_RX3 ALT3: ALT4: ENET_1588_EVENT0_IN ALT5: GPIO1_IO29 ALT6: ALT7:	NVCC_ENET	
V3	NVCC_ENET		NVCC_ENET	
V4	RGMII_RX_CTL	ALT0: USB_H3_DATA ALT1: RGMII_RX_CTL ALT2: ALT3: ALT4: ALT5: GPIO6_IO24 ALT6: ALT7:	NVCC_RGMII	

LGA pad	Pad name	Multiplexing	IO type	Comments
V5	RGMII_TD1	ALT0: HSI_RX_FLAG ALT1: RGMII_TD1 ALT2: ALT3: ALT4: ALT5: GPIO6_IO21 ALT6: ALT7:	NVCC_RGMII	
V6	DISP0_DAT16	ALT0: IPU1_DISP0_DATA16 ALT1: IPU2_DISP0_DATA16 ALT2: ECSP12_MOSI ALT3: AUD5_TXC ALT4: SDMA_EXT_EVENT0 ALT5: GPIO5_IO10 ALT6: ALT7:	NVCC_LCD	
V7	DISP0_DAT22	ALT0: IPU1_DISP0_DATA22 ALT1: IPU2_DISP0_DATA22 ALT2: ECSP11_MISO ALT3: AUD4_TXFS ALT4: ALT5: GPIO5_IO16 ALT6: ALT7:	NVCC_LCD	
V8	DI0_PIN3	ALT0: IPU1_DI0_PIN03 ALT1: IPU2_DI0_PIN03 ALT2: AUD6_TXFS ALT3: ALT4: ALT5: GPIO4_IO19 ALT6: ALT7:	NVCC_LCD	

LGA pad	Pad name	Multiplexing	IO type	Comments
V9	DI0_DISP_CLK	ALT0: IPU1_DI0_DISP_CLK ALT1: IPU2_DI0_DISP_CLK ALT2: ALT3: ALT4: ALT5: GPIO4_IO16 ALT6: ALT7:	NVCC_LCD	
V10	DI0_PIN15	ALT0: IPU1_DI0_PIN15 ALT1: IPU2_DI0_PIN15 ALT2: AUD6_TXC ALT3: ALT4: ALT5: GPIO4_IO17 ALT6: ALT7:	NVCC_LCD	
V11	VSYS		VSYS	
V12	PMIC_GPIO11		-	PMIC
V13	PMIC_GPIO15		-	PMIC
V14	CHG_WAKE		-	PMIC
V15	EIM_OE	ALT0: EIM_OE ALT1: IPU1_DI1_PIN07 ALT2: ECSPI2_MISO ALT3: ALT4: ALT5: GPIO2_IO25 ALT6: ALT7:	NVCC_EIM	

LGA pad	Pad name	Multiplexing	IO type	Comments
V16	EIM_EB1	ALT0: EIM_EB1 ALT1: IPU1_DISP1_DATA10 ALT2: IPU2_CSI1_DATA10 ALT3: ALT4: ALT5: GPIO2_IO29 ALT6: ALT7: SRC_BOOT_CFG28	NVCC_EIM	
V17	EIM_D17	ALT0: EIM_DATA17 ALT1: ECSPI1_MISO ALT2: IPU1_DIO_PIN06 ALT3: IPU2_CSI1_PIXCLK ALT4: DCIC1_OUT ALT5: GPIO3_IO17 ALT6: I2C3_SCL ALT7:	NVCC_EIM	
V18	EIM_DA11	ALT0: EIM_DA11 ALT1: IPU1_DI1_PIN02 ALT2: IPU2_CSI1_HSYNC ALT3: ALT4: ALT5: GPIO3_IO11 ALT6: ALT7: SRC_BOOT_CFG11	NVCC_EIM	10K pull-up to NVCC_EIM on module
V19	EIM_DA9	ALT0: EIM_DA9 ALT1: IPU1_DISP1_DATA00 ALT2: IPU2_CSI1_DATA00 ALT3: ALT4: ALT5: GPIO3_IO09 ALT6: ALT7: SRC_BOOT_CFG09	NVCC_EIM	

LGA pad	Pad name	Multiplexing	IO type	Comments
V20	EIM_DA13	ALT0: EIM_DA13 ALT1: IPU1_DI1_D0_CS ALT2: ALT3: ALT4: ALT5: GPIO3_IO13 ALT6: ALT7: SRC_BOOT_CFG13	NVCC_EIM	10K pull-down on module
V21	EIM_DA10	ALT0: EIM_DA10 ALT1: IPU1_DI1_PIN15 ALT2: IPU2_CSI1_DATA_EN ALT3: ALT4: ALT5: GPIO3_IO10 ALT6: ALT7: SRC_BOOT_CFG10	NVCC_EIM	
V22	EIM_DA12	ALT0: EIM_DA12 ALT1: IPU1_DI1_PIN03 ALT2: IPU2_CSI1_VSYNC ALT3: ALT4: ALT5: GPIO3_IO12 ALT6: ALT7: SRC_BOOT_CFG12	NVCC_EIM	10K pull-up to NVCC_EIM on module
V23	GND		-	
V24	EIM_DA2	ALT0: EIM_DA02 ALT1: IPU1_DISP1_DATA07 ALT2: IPU2_CSI1_DATA07 ALT3: ALT4: ALT5: GPIO3_IO02 ALT6: ALT7: SRC_BOOT_CFG02	NVCC_EIM	
W1	GND		-	
W2	GND		-	

LGA pad	Pad name	Multiplexing	IO type	Comments
W3	ENET_MDC	ALT0: MLB_DATA ALT1: ENET_MDC ALT2: ESAI_TX5_RX0 ALT3: ALT4: ENET_1588_EVENT1_IN ALT5: GPIO1_IO31 ALT6: ALT7:	NVCC_ENET	
W4	RGMII_TX_CTL	ALT0: USB_H2_STROBE ALT1: RGMII_TX_CTL ALT2: ALT3: ALT4: ALT5: GPIO6_IO26 ALT6: ALT7: ENET_REF_CLK	NVCC_RGMII	
W5	GND		-	
W6	DISP0_DAT20	ALT0: IPU1_DISP0_DATA20 ALT1: IPU2_DISP0_DATA20 ALT2: ECSPI1_SCLK ALT3: AUD4_TXC ALT4: ALT5: GPIO5_IO14 ALT6: ALT7:	NVCC_LCD	
W7	DISP0_DAT15	ALT0: IPU1_DISP0_DATA15 ALT1: IPU2_DISP0_DATA15 ALT2: ECSPI1_SS1 ALT3: ECSPI2_SS1 ALT4: ALT5: GPIO5_IO09 ALT6: ALT7:	NVCC_LCD	

LGA pad	Pad name	Multiplexing	IO type	Comments
W8	DISP0_DAT13	ALT0: IPU1_DISP0_DATA13 ALT1: IPU2_DISP0_DATA13 ALT2: ALT3: AUD5_RXFS ALT4: ALT5: GPIO5_IO07 ALT6: ALT7:	NVCC_LCD	
W9	GND		-	
W10	DI0_PIN2	ALT0: IPU1_DI0_PIN02 ALT1: IPU2_DI0_PIN02 ALT2: AUD6_TXD ALT3: ALT4: ALT5: GPIO4_IO18 ALT6: ALT7:	NVCC_LCD	
W11	VSYS		VSYS	
W12	VSYS		VSYS	
W13	PMIC_PWR_EN		-	PMIC
W14	GND		-	
W15	EIM_RW	ALT0: EIM_RW ALT1: IPU1_DI1_PIN08 ALT2: ECSPi2_SS0 ALT3: ALT4: ALT5: GPIO2_IO26 ALT6: ALT7: SRC_BOOT_CFG29	NVCC_EIM	

LGA pad	Pad name	Multiplexing	IO type	Comments
W16	EIM_D29	ALT0: EIM_DATA29 ALT1: IPU1_DI1_PIN15 ALT2: ECSPI4_SS0 ALT3: ALT4: UART2_RTS_B ALT5: GPIO3_IO29 ALT6: IPU2_CSI1_VSYNC ALT7: IPU1_DIO_PIN14	NVCC_EIM	
W17	GND		-	
W18	EIM_A25	ALT0: EIM_ADDR25 ALT1: ECSPI4_SS1 ALT2: ECSPI2_RDY ALT3: IPU1_DI1_PIN12 ALT4: IPU1_DIO_D1_CS ALT5: GPIO5_IO02 ALT6: HDMI_TX_CEC_LINE ALT7:	NVCC_EIM	
W19	EIM_D20	ALT0: EIM_DATA20 ALT1: ECSPI4_SS0 ALT2: IPU1_DIO_PIN16 ALT3: IPU2_CSI1_DATA15 ALT4: UART1_RTS_B ALT5: GPIO3_IO20 ALT6: EPIT2_OUT ALT7:	NVCC_EIM	
W20	EIM_D24	ALT0: EIM_DATA24 ALT1: ECSPI4_SS2 ALT2: UART3_TX_DATA ALT3: ECSPI1_SS2 ALT4: ECSPI2_SS2 ALT5: GPIO3_IO24 ALT6: AUD5_RXFS ALT7: UART1_DTR_B	NVCC_EIM	

LGA pad	Pad name	Multiplexing	IO type	Comments
W21	EIM_DA14	ALT0: EIM_DA14 ALT1: IPU1_DI1_D1_CS ALT2: ALT3: ALT4: ALT5: GPIO3_IO14 ALT6: ALT7: SRC_BOOT_CFG14	NVCC_EIM	10K pull-up to NVCC_EIM on module
W22	EIM_DA8	ALT0: EIM_DA8 ALT1: IPU1_DISP1_DATA01 ALT2: IPU2_CSI1_DATA01 ALT3: ALT4: ALT5: GPIO3_IO08 ALT6: ALT7: SRC_BOOT_CFG08	NVCC_EIM	
W23	EIM_DA1	ALT0: EIM_DA1 ALT1: IPU1_DISP1_DATA08 ALT2: IPU2_CSI1_DATA08 ALT3: ALT4: ALT5: GPIO3_IO01 ALT6: ALT7: SRC_BOOT_CFG01	NVCC_EIM	
W24	EIM_DA4	ALT0: EIM_DA4 ALT1: IPU1_DISP1_DATA05 ALT2: IPU2_CSI1_DATA05 ALT3: ALT4: ALT5: GPIO3_IO04 ALT6: ALT7: SRC_BOOT_CFG04	NVCC_EIM	10K pull-down on module

LGA pad	Pad name	Multiplexing	IO type	Comments
Y1	ENET_REF_CLK	ALT0: ALT1: ENET_TX_CLK ALT2: ESAI_RX_FS ALT3: ALT4: ALT5: GPIO1_IO23 ALT6: SPDIF_SR_CLK ALT7:	NVCC_ENET	
Y2	ENET_RXD0	ALT0: ALT1: ENET_RX_DATA0 ALT2: ESAI_TX_HF_CLK ALT3: SPDIF_OUT ALT4: ALT5: GPIO1_IO27 ALT6: ALT7:	NVCC_ENET	
Y3	ENET_MDIO	ALT0: ALT1: ENET_MDIO ALT2: ESAI_RX_CLK ALT3: ALT4: ENET_1588_EVENT1_OUT ALT5: GPIO1_IO22 ALT6: SPDIF_LOCK ALT7:	NVCC_ENET	
Y4	GND		-	
Y5	RGMII_TD2	ALT0: HSI_RX_DATA ALT1: RGMII_TD2 ALT2: ALT3: ALT4: ALT5: GPIO6_IO22 ALT6: ALT7:	NVCC_RGMII	

LGA pad	Pad name	Multiplexing	IO type	Comments
Y6	DISP0_DAT19	ALT0: IPU1_DISP0_DATA19 ALT1: IPU2_DISP0_DATA19 ALT2: ECSPI2_SCLK ALT3: AUD5_RXD ALT4: AUD4_RXC ALT5: GPIO5_IO13 ALT6: ALT7: EIM_CS3	NVCC_LCD	
Y7	DISP0_DAT11	ALT0: IPU1_DISP0_DATA11 ALT1: IPU2_DISP0_DATA11 ALT2: ALT3: ALT4: ALT5: GPIO5_IO05 ALT6: ALT7:	NVCC_LCD	
Y8	DISP0_DAT10	ALT0: IPU1_DISP0_DATA10 ALT1: IPU2_DISP0_DATA10 ALT2: ALT3: ALT4: ALT5: GPIO4_IO31 ALT6: ALT7:	NVCC_LCD	
Y9	NVCC_LCD		NVCC_LCD	
Y10	PMIC_GPIO14		-	
Y11	GND		-	
Y12	GND		-	
Y13	NVCC_EIM		NVCC_EIM	

LGA pad	Pad name	Multiplexing	IO type	Comments
Y14	EIM_EB0	ALT0: EIM_EB0 ALT1: IPU1_DISP1_DATA11 ALT2: IPU2_CSI1_DATA11 ALT3: ALT4: CCM_PMIC_READY ALT5: GPIO2_IO28 ALT6: ALT7: SRC_BOOT_CFG27	NVCC_EIM	
Y15	EIM_D30	ALT0: EIM_DATA30 ALT1: IPU1_DISP1_DATA21 ALT2: IPU1_DIO_PIN11 ALT3: IPU1_CSI0_DATA03 ALT4: UART3_CTS_B ALT5: GPIO3_IO30 ALT6: USB_H1_OC ALT7:	NVCC_EIM	
Y16	EIM_D21	ALT0: EIM_DATA21 ALT1: ECSP14_SCLK ALT2: IPU1_DIO_PIN17 ALT3: IPU2_CSI1_DATA11 ALT4: USB_OTG_OC ALT5: GPIO3_IO21 ALT6: I2C1_SCL ALT7: SPDIF_IN	NVCC_EIM	
Y17	EIM_D19	ALT0: EIM_DATA19 ALT1: ECSP11_SS1 ALT2: IPU1_DIO_PIN08 ALT3: IPU2_CSI1_DATA16 ALT4: UART1_CTS_B ALT5: GPIO3_IO19 ALT6: EPIT1_OUT ALT7:	NVCC_EIM	

LGA pad	Pad name	Multiplexing	IO type	Comments
Y18	EIM_D22	ALT0: EIM_DATA22 ALT1: ECSPI4_MISO ALT2: IPU1_DIO_PIN01 ALT3: IPU2_CSI1_DATA10 ALT4: USB_OTG_PWR ALT5: GPIO3_IO22 ALT6: SPDIF_OUT ALT7:	NVCC_EIM	
Y19	GND		-	
Y20	EIM_DA15	ALT0: EIM_DA15 ALT1: IPU1_DI1_PIN01 ALT2: IPU1_DI1_PIN04 ALT3: ALT4: ALT5: GPIO3_IO15 ALT6: ALT7: SRC_BOOT_CFG15	NVCC_EIM	
Y21	EIM_DA7	ALT0: EIM_DA7 ALT1: IPU1_DISP1_DATA02 ALT2: IPU2_CSI1_DATA02 ALT3: ALT4: ALT5: GPIO3_IO07 ALT6: ALT7: SRC_BOOT_CFG07	NVCC_EIM	10K pull-down on module
Y22	MCA_IO27	ALT0: ADC0_SE2 ALT1: PTE18 ALT2: SPI0_MOSI ALT3: - ALT4: I2C0_SDA ALT5: SPI0_MISO ALT6: - ALT7: -	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.

LGA pad	Pad name	Multiplexing	IO type	Comments
Y23	MCA_IO23	ALT0: CMP0_IN5/ADC0_SE4b ALT1: PTE29 ALT2: - ALT3: TPM0_CH2 ALT4: TPM_CLKIN0 ALT5: - ALT6: - ALT7: -	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.
Y24	EIM_EB2	ALT0: EIM_EB2 ALT1: ECSPI1_SS0 ALT2: ALT3: IPU2_CSI1_DATA19 ALT4: HDMI_TX_DDC_SCL ALT5: GPIO2_IO30 ALT6: I2C2_SCL ALT7: SRC_BOOT_CFG30	NVCC_EIM	
AA2	ENET_RXD1	ALT0: MLB_SIG ALT1: ENET_RX_DATA1 ALT2: ESAI_TX_FS ALT3: ALT4: ENET_1588_EVENT3_OUT ALT5: GPIO1_IO26 ALT6: ALT7:	NVCC_ENET	
AA3	ENET_TX_EN	ALT0: ALT1: ENET_TX_EN ALT2: ESAI_TX3_RX2 ALT3: ALT4: ALT5: GPIO1_IO28 ALT6: ALT7:	NVCC_ENET	

LGA pad	Pad name	Multiplexing	IO type	Comments
AA4	RGMII_RD0	ALT0: HSI_RX_READY ALT1: RGMII_RD0 ALT2: ALT3: ALT4: ALT5: GPIO6_IO25 ALT6: ALT7:	NVCC_RGMII	
AA5	RGMII_TD3	ALT0: HSI_RX_WAKE ALT1: RGMII_TD3 ALT2: ALT3: ALT4: ALT5: GPIO6_IO23 ALT6: ALT7:	NVCC_RGMII	
AA6	DISP0_DAT23	ALT0: IPU1_DISP0_DATA23 ALT1: IPU2_DISP0_DATA23 ALT2: ECSPI1_SS0 ALT3: AUD4_RXD ALT4: ALT5: GPIO5_IO17 ALT6: ALT7:	NVCC_LCD	
AA7	DISP0_DAT12	ALT0: IPU1_DISP0_DATA12 ALT1: IPU2_DISP0_DATA12 ALT2: ALT3: ALT4: ALT5: GPIO5_IO06 ALT6: ALT7:	NVCC_LCD	

LGA pad	Pad name	Multiplexing	IO type	Comments
AA8	DISP0_DAT8	ALT0: IPU1_DISP0_DATA08 ALT1: IPU2_DISP0_DATA08 ALT2: PWM1_OUT ALT3: WDOG1_B ALT4: ALT5: GPIO4_IO29 ALT6: ALT7:	NVCC_LCD	
AA9	DISP0_DAT4	ALT0: IPU1_DISP0_DATA04 ALT1: IPU2_DISP0_DATA04 ALT2: ECSPI3_SS1 ALT3: ALT4: ALT5: GPIO4_IO25 ALT6: ALT7:	NVCC_LCD	
AA10	VLDO6		VLDO6	
AA11	VLDO7		VLDO7	
AA12	GEN_3V3		GEN_3V3	
AA13	EIM_WAIT	ALT0: EIM_WAIT ALT1: EIM_DTACK_B ALT2: ALT3: ALT4: ALT5: GPIO5_IO00 ALT6: ALT7: SRC_BOOT_CFG25	NVCC_EIM	
AA14	EIM_A23	ALT0: EIM_ADDR23 ALT1: IPU1_DISP1_DATA18 ALT2: IPU2_CSI1_DATA18 ALT3: IPU2_SISG3 ALT4: IPU1_SISG3 ALT5: GPIO6_IO06 ALT6: ALT7: SRC_BOOT_CFG23	NVCC_EIM	

LGA pad	Pad name	Multiplexing	IO type	Comments
AA15	EIM_D31	ALT0: EIM_DATA31 ALT1: IPU1_DISP1_DATA20 ALT2: IPU1_DI0_PIN12 ALT3: IPU1_CSI0_DATA02 ALT4: UART3_RTS_B ALT5: GPIO3_IO31 ALT6: USB_H1_PWR ALT7:	NVCC_EIM	
AA16	GND		-	
AA17	EIM_D25	ALT0: EIM_DATA25 ALT1: ECSPI4_SS3 ALT2: UART3_RX_DATA ALT3: ECSPI1_SS3 ALT4: ECSPI2_SS3 ALT5: GPIO3_IO25 ALT6: AUD5_RXC ALT7: UART1_DSR_B	NVCC_EIM	
AA18	EIM_EB3	ALT0: EIM_EB3 ALT1: ECSPI4_RDY ALT2: UART3_RTS_B ALT3: UART1_RI_B ALT4: IPU2_CSI1_HSYNC ALT5: GPIO2_IO31 ALT6: IPU1_DI1_PIN03 ALT7: SRC_BOOT_CFG31	NVCC_EIM	
AA19	EIM_DA5	ALT0: EIM_DA5 ALT1: IPU1_DISP1_DATA04 ALT2: IPU2_CSI1_DATA04 ALT3: ALT4: ALT5: GPIO3_IO05 ALT6: ALT7: SRC_BOOT_CFG05	NVCC_EIM	10K pull-up to NVCC_EIM on module

LGA pad	Pad name	Multiplexing	IO type	Comments
AA20	MCA_IO21	ALT0: - ALT1: PTD7 ALT2: SPI1_MISO ALT3: UART0_TX ALT4: - ALT5: SPI1_MOSI ALT6: - ALT7: -	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.
AA21	MCA_IO26	ALT0: - ALT1: PTA4 ALT2: I2C1_SDA ALT3: TPM0_CH1 ALT4: - ALT5: - ALT6: - ALT7: NMI_b	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.
AA22	MCA_IO25	ALT0: - ALT1: PTA1 ALT2: UART0_RX ALT3: TPM2_CH0 ALT4: - ALT5: - ALT6: - ALT7: -	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.
AA23	MCA_IO6/PMIC_GP_FB2	ALT0: - ALT1: PTA2 ALT2: UART0_TX ALT3: TPM2_CH1 ALT4: - ALT5: - ALT6: - ALT7: -	LDO3_MCA	Assuming FREESCALE MKL14Z32VFT4 is populated. Signal not used on module.

LGA pad	Pad name	Multiplexing	IO type	Comments
AB3	RGMII_RD1	ALT0: HSI_TX_FLAG ALT1: RGMII_RD1 ALT2: ALT3: ALT4: ALT5: GPIO6_IO27 ALT6: ALT7:	NVCC_RGMII	
AB4	GND		-	
AB5	DISP0_DAT17	ALT0: IPU1_DISP0_DATA17 ALT1: IPU2_DISP0_DATA17 ALT2: ECSPI2_MISO ALT3: AUD5_TXD ALT4: SDMA_EXT_EVENT1 ALT5: GPIO5_IO11 ALT6: ALT7:	NVCC_LCD	
AB6	DISP0_DAT9	ALT0: IPU1_DISP0_DATA09 ALT1: IPU2_DISP0_DATA09 ALT2: PWM2_OUT ALT3: WDOG2_B ALT4: ALT5: GPIO4_IO30 ALT6: ALT7:	NVCC_LCD	
AB7	DISP0_DAT6	ALT0: IPU1_DISP0_DATA06 ALT1: IPU2_DISP0_DATA06 ALT2: ECSPI3_SS3 ALT3: AUD6_RXC ALT4: ALT5: GPIO4_IO27 ALT6: ALT7:	NVCC_LCD	

LGA pad	Pad name	Multiplexing	IO type	Comments
AB8	DISP0_DAT3	ALT0: IPU1_DISP0_DATA03 ALT1: IPU2_DISP0_DATA03 ALT2: ECSPI3_SS0 ALT3: ALT4: ALT5: GPIO4_IO24 ALT6: ALT7:	NVCC_LCD	
AB9	PMIC_GPIO7		-	PMIC
AB10	GND		-	
AB11	Reserved		-	
AB12	EIM_BCLK	ALT0: EIM_BCLK ALT1: IPU1_DI1_PIN16 ALT2: ALT3: ALT4: ALT5: GPIO6_IO31 ALT6: ALT7:	NVCC_EIM	
AB13	EIM_CS0	ALT0: EIM_CS0 ALT1: IPU1_DI1_PIN05 ALT2: ECSPI2_SCLK ALT3: ALT4: ALT5: GPIO2_IO23 ALT6: ALT7:	NVCC_EIM	
AB14	PMIC_ADCIN1/ GPIO0		-	PMIC

LGA pad	Pad name	Multiplexing	IO type	Comments
AB15	EIM_A18	ALT0: EIM_ADDR18 ALT1: IPU1_DISP1_DATA13 ALT2: IPU2_CSI1_DATA13 ALT3: ALT4: ALT5: GPIO2_IO20 ALT6: ALT7: SRC_BOOT_CFG18	NVCC_EIM	
AB16	EIM_A20	ALT0: EIM_ADDR20 ALT1: IPU1_DISP1_DATA15 ALT2: IPU2_CSI1_DATA15 ALT3: ALT4: ALT5: GPIO2_IO18 ALT6: ALT7: SRC_BOOT_CFG20	NVCC_EIM	
AB17	EIM_D28	ALT0: EIM_DATA28 ALT1: I2C1_SDA ALT2: ECSPi4_MOSI ALT3: IPU2_CSI1_DATA12 ALT4: UART2_CTS_B ALT5: GPIO3_IO28 ALT6: IPU1_EXT_TRIG ALT7: IPU1_DI0_PIN13	NVCC_EIM	
AB18	EIM_D18	ALT0: EIM_DATA18 ALT1: ECSPi1_MOSI ALT2: IPU1_DI0_PIN07 ALT3: IPU2_CSI1_DATA17 ALT4: IPU1_DI1_D0_CS ALT5: GPIO3_IO18 ALT6: I2C3_SDA ALT7:	NVCC_EIM	
AB19	PMIC_PWR1_EN			
AB20	#PMIC_VDD_FAULT			
AB21	GND		-	

LGA pad	Pad name	Multiplexing	IO type	Comments
AB22	#PMIC_OFF			
AC4	RGMII_RD2	ALT0: HSI_TX_DATA ALT1: RGMII_RD2 ALT2: ALT3: ALT4: ALT5: GPIO6_IO28 ALT6: ALT7:	NVCC_RGMII	
AC5	RGMII_RD3	ALT0: HSI_TX_WAKE ALT1: RGMII_RD3 ALT2: ALT3: ALT4: ALT5: GPIO6_IO29 ALT6: ALT7:	NVCC_RGMII	
AC6	DISP0_DAT14	ALT0: IPU1_DISP0_DATA14 ALT1: IPU2_DISP0_DATA14 ALT2: ALT3: AUD5_RXC ALT4: ALT5: GPIO5_IO08 ALT6: ALT7:	NVCC_LCD	
AC7	DISP0_DAT7	ALT0: IPU1_DISP0_DATA07 ALT1: IPU2_DISP0_DATA07 ALT2: ECSPI3_RDY ALT3: ALT4: ALT5: GPIO4_IO28 ALT6: ALT7:	NVCC_LCD	

LGA pad	Pad name	Multiplexing	IO type	Comments
AC8	DISP0_DAT0	ALT0: IPU1_DISP0_DATA00 ALT1: IPU2_DISP0_DATA00 ALT2: ECSPI3_SCLK ALT3: ALT4: ALT5: GPIO4_IO21 ALT6: ALT7:	NVCC_LCD	
AC9	DISP0_DAT1	ALT0: IPU1_DISP0_DATA01 ALT1: IPU2_DISP0_DATA01 ALT2: ECSPI3_MOSI ALT3: ALT4: ALT5: GPIO4_IO22 ALT6: ALT7:	NVCC_LCD	
AC10	MCA_VREFH	VREFH	-	Not used on module. A 100nF capacitor connected to GND is placed close to this pin on ConnectCore 6 SOM.
AC11	Reserved		-	
AC12	GND		-	
AC13	GND		-	
AC14	PMIC_ADCIN2/ GPIO1		-	PMIC
AC15	EIM_CS1	ALT0: EIM_CS1 ALT1: IPU1_DI1_PIN06 ALT2: ECSPI2_MOSI ALT3: ALT4: ALT5: GPIO2_IO24 ALT6: ALT7:	NVCC_EIM	

LGA pad	Pad name	Multiplexing	IO type	Comments
AC16	EIM_A21	ALT0: EIM_ADDR21 ALT1: IPU1_DISP1_DATA16 ALT2: IPU2_CSI1_DATA16 ALT3: ALT4: ALT5: GPIO2_IO17 ALT6: ALT7: SRC_BOOT_CFG21	NVCC_EIM	
AC17	EIM_A17	ALT0: EIM_ADDR17 ALT1: IPU1_DISP1_DATA12 ALT2: IPU2_CSI1_DATA12 ALT3: ALT4: ALT5: GPIO2_IO21 ALT6: ALT7: SRC_BOOT_CFG17	NVCC_EIM	
AC18	GND		-	
AC19	EIM_A22	ALT0: EIM_ADDR22 ALT1: IPU1_DISP1_DATA17 ALT2: IPU2_CSI1_DATA17 ALT3: ALT4: ALT5: GPIO2_IO16 ALT6: ALT7: SRC_BOOT_CFG22	NVCC_EIM	
AC20	EIM_D23	ALT0: EIM_DATA23 ALT1: IPU1_DI0_D0_CS ALT2: UART3_CTS_B ALT3: UART1_DCD_B ALT4: IPU2_CSI1_DATA_EN ALT5: GPIO3_IO23 ALT6: IPU1_DI1_PIN02 ALT7: IPU1_DI1_PIN14	NVCC_EIM	

LGA pad	Pad name	Multiplexing	IO type	Comments
AC21	MCA_IO28	ALT0: - ALT1: PTE25 ALT2: - ALT3: TPM0_CH1 ALT4: - ALT5: I2C0_SDA ALT6: - ALT7: -	LDO3_MCA	Not used on module. For K10 and K20 processors, this pin is VBAT. ConnectCore 6 SOM has an 0R resistor foreseen on this pin for connecting this signal to LDO3_MCA. By default, the resistor is not populated and MCA_IO28 is available on module pad. 1x 100nF + 1x1μF capacitors connected to GND are placed close to this pin on ConnectCore 6 SOM.
AD5	RGMII_RXC	ALT0: USB_H3_STROBE ALT1: RGMII_RXC ALT2: ALT3: ALT4: ALT5: GPIO6_IO30 ALT6: ALT7:	NVCC_RGMII	
AD6	DISP0_DAT18	ALT0: IPU1_DISP0_DATA18 ALT1: IPU2_DISP0_DATA18 ALT2: ECSPI2_SS0 ALT3: AUD5_TXFS ALT4: AUD4_RXFS ALT5: GPIO5_IO12 ALT6: ALT7: EIM_CS2	NVCC_LCD	
AD7	DISP0_DAT5	ALT0: IPU1_DISP0_DATA05 ALT1: IPU2_DISP0_DATA05 ALT2: ECSPI3_SS2 ALT3: AUD6_RXFS ALT4: ALT5: GPIO4_IO26 ALT6: ALT7:	NVCC_LCD	

LGA pad	Pad name	Multiplexing	IO type	Comments
AD8	DI0_PIN4	ALT0: IPU1_DI0_PIN04 ALT1: IPU2_DI0_PIN04 ALT2: AUD6_RXD ALT3: SD1_WP ALT4: ALT5: GPIO4_IO20 ALT6: ALT7:	NVCC_LCD	
AD9	DISP0_DAT2	ALT0: IPU1_DISP0_DATA02 ALT1: IPU2_DISP0_DATA02 ALT2: ECSPI3_MISO ALT3: ALT4: ALT5: GPIO4_IO23 ALT6: ALT7:	NVCC_LCD	
AD10	VLDO4		-	
AD11	VLDO8		-	
AD12	PMIC_GP_FB3		-	PMIC
AD13	PMIC_GP_FB1/ GPIO13		-	PMIC
AD14	PMIC_ADCIN3/ GPIO2		-	PMIC
AD15	EIM_A16	ALT0: EIM_ADDR16 ALT1: IPU1_DI1_DISP_CLK ALT2: IPU2_CSI1_PIXCLK ALT3: ALT4: ALT5: GPIO2_IO22 ALT6: ALT7: SRC_BOOT_CFG16	NVCC_EIM	

LGA pad	Pad name	Multiplexing	IO type	Comments
AD16	EIM_A19	ALT0: EIM_ADDR19 ALT1: IPU1_DISP1_DATA14 ALT2: IPU2_CSI1_DATA14 ALT3: ALT4: ALT5: GPIO2_IO19 ALT6: ALT7: SRC_BOOT_CFG19	NVCC_EIM	
AD17	EIM_A24	ALT0: EIM_ADDR24 ALT1: IPU1_DISP1_DATA19 ALT2: IPU2_CSI1_DATA19 ALT3: IPU2_SISG2 ALT4: IPU1_SISG2 ALT5: GPIO5_IO04 ALT6: ALT7: SRC_BOOT_CFG24	NVCC_EIM	
AD18	EIM_D27	ALT0: EIM_DATA27 ALT1: IPU1_DI1_PIN13 ALT2: IPU1_CSI0_DATA00 ALT3: IPU2_CSI1_DATA13 ALT4: UART2_RX_DATA ALT5: GPIO3_IO27 ALT6: IPU1_SISG3 ALT7: IPU1_DISP1_DATA23	NVCC_EIM	

LGA pad	Pad name	Multiplexing	IO type	Comments
AD19	EIM_D26	ALT0: EIM_DATA26 ALT1: IPU1_DI1_PIN11 ALT2: IPU1_CSI0_DATA01 ALT3: IPU2_CSI1_DATA14 ALT4: UART2_TX_DATA ALT5: GPIO3_IO26 ALT6: IPU1_SISG2 ALT7: IPU1_DISP1_DATA22	NVCC_EIM	
AD20	EIM_D16	ALT0: EIM_DATA16 ALT1: ECSP11_SCLK ALT2: IPU1_DIO_PIN05 ALT3: IPU2_CSI1_DATA18 ALT4: HDMI_TX_DDC_SDA ALT5: GPIO3_IO16 ALT6: I2C2_SDA ALT7:	NVCC_EIM	

Signal Usage Limitations

The following signals available on ConnectCore for i.MX6 pads have a limited usage:

- SD1_CLK (pad L21), SD1_CMD (pad J23), SD1_DAT[3:0] (pads L20, J21, J22 and N24) are only available externally on modules which don't have Wi-Fi populated.
- SD3_DAT4/BT_UART_RXD (pad C22), SD3_DAT5/BT_UART_TXD (pad D23), SD3_CLK/BT_UART_RTS (pad B21), SD3_CMD/BT_UART_CTS (pad E23) are only available externally on modules which don't have Bluetooth populated.
- NANDF_CLE/BT_WAKE (pad E22) is only available externally on modules which don't have Bluetooth populated.
- I2C2_SCL/KEY_COL3 (pad C3) and I2C2_SDA/KEY_ROW3 (pad F2) are used on the module as I2C signals connected to the PMIC and MCA processor. Using these signals externally should be done with caution, since it could prevent the module from working properly. It is recommended that you use another I2C port for connecting external devices to the ConnectCore i.MX6 module in order to avoid excessive bus load.
- NANDF_CS1/#MCA_INT (pad H21), CSI0_DAT11/ECSP12_SS0 (pad A6), CSI0_DAT8/ECSP12_SCLK (pad D6), CSI0_DAT10/ECSP12_MISO (pad K5) and CSI0_DAT9/ECSP12_MOSI (pad D5) are connected to MCA processor. #MCA_INT is a signal reserved as interrupt between MCA processor and i.MX6 processor. The other signals are a SPI bus shared between i.MX6 and MCA processor. The usage and availability of these signals is depending on the firmware running in the MCA processor.
- ON/OFF (pad D18) signal is connected to PMIC and MCA.
- #POR (pad E18) is connected to PMIC and i.MX6 processor.

MCA Hardware

Supported Devices

The ConnectCore 6 module is designed to support a Freescale Kinetis processor in a QFN48 package. See below for a list of compatible Kinetis processors that can be used in this package size:

- MKL14Z32VFT4
- MKL14Z64VFT4
- MKL15Z128VFT4
- MKL15Z32VFT4
- MKL15Z64VFT4
- MKL24Z32VFT4
- MKL24Z64VFT4
- MKL25Z128VFT4
- MKL25Z32VFT4
- MKL25Z64VFT4
- MKL26Z128VFT4
- MKL26Z64VFT4
- MKL26Z32VFT4
- K10P48M50SF0
- K20P48M50SF0

By default, Freescale MKL14Z32VFT4 is populated on the module variants supporting the MCA unit.

MCA Pinout

The table below contains the pinouts for the MCA unit on ConnectCore 6 module. The pinout information assumes the usage of Freescale MKL14Z32VFT4 microcontroller. Using a different Kinetis microcontroller may change the functions available on the MCA pins.

MCA		ConnectCore 6		
Pin Nr	Signal Name	Pad Nr	Signal Name	Usage on module
1	VDD	-	LDO3_MCA	MCA power supply 1x 100nF + 1x1μF capacitors connected to GND are placed close to this pin on ConnectCore 6 SOM.
2	VSS	-	GND	MCA ground

MCA		ConnectCore 6		
Pin Nr	Signal Name	Pad Nr	Signal Name	Usage on module
3	ADC0_SE1 PTE16 SPI0_PCS0 UART2_TX TPM_CLKIN0 - - -	N20	MCA_IO/USB0_P	Not used on module. For KL24, KL25 and K20 processors, this pin is USB0_DP. MCA_IO/USB0_P (N20) and MCA_IO/USB0_N (P20) have been routed as differential pair for supporting USB functionality on KL24, KL25 and K20 processors.
4	ADC0_SE5a PTE17 SPI0_SCK UART2_RX TPM_CLKIN1 - LPTMR0_ALT3 -	P20	MCA_IO/USB0_N	Not used on module. For KL24, KL25 and K20 processors, this pin is USB0_DN. MCA_IO/USB0_P (N20) and MCA_IO/USB0_N (P20) have been routed as differential pair for supporting USB functionality on KL24, KL25 and K20 processors.
5	ADC0_SE2 PTE18 SPI0_MOSI - I2C0_SDA SPI0_MISO - -	Y22	MCA_IO27	Not used on module. For KL24 and K20 processors, this pin is VOUT33. ConnectCore 6 SOM has a 0R resistor foreseen on this pin for connecting this signal to LDO3_MCA. By default, the resistor is not populated and MCA_IO27 is available on module pad.
6	ADC0_SE6a PTE19 SPI0_MISO - I2C0_SCL SPI0_MOSI - -	P21	MCA_IO14	Not used on module.

MCA		ConnectCore 6		
Pin Nr	Signal Name	Pad Nr	Signal Name	Usage on module
7	ADC0_SE0 PTE20 - TPM1_CH0 UART0_TX - - -	T23	MCA_IO0	Not used on module.
8	ADC0_SE4a PTE21 - TPM1_CH1 UART0_RX - - -	P23	MCA_IO1	Not used on module.
9	VDDA	-	LDO3_MCA	MCA power supply A 100nF capacitor connected to GND is placed close to this pin on ConnectCore 6 SOM.
10	VREFH	AC10	MCA_VREFH	Not used on module. A 100nF capacitor connected to GND is placed close to this pin on ConnectCore 6 SOM.
11	VREFL	-	GND	MCA ground
12	VSSA	-	GND	MCA ground
13	CMP0_IN5/ ADC0_SE4b PTE29 - TPM0_CH2 TPM_CLKIN0 - - -	Y23	MCA_IO23	Not used on module.

MCA		ConnectCore 6		
Pin Nr	Signal Name	Pad Nr	Signal Name	Usage on module
14	ADC0_SE23/ CMP0_IN4 PTE30 - TPM0_CH3 TPM_CLKIN1 - - -	-	-	This MCA pin is connected to the gate of an N-channel MOSFET. A 10K pull-down resistor is connected to GND on this signal too. The drain of the MOSFET is connected to ConnectCore 6 signal ON/OFF (pad D18). The source of the MOSFET is connected to GND. This signal is reserved on the module and allows MCA to control ON/OFF signal over software.
15	- PTE24 - TPM0_CH0 - I2C0_SCL - -	-	KINETIS_32K	This MCA pin is connected to 32K output of the PMIC. It's the clock input of the MCA processor.
16	- PTE25 - TPM0_CH1 - I2C0_SDA - -	AC21	MCA_IO28	Not used on module. For K10 and K20 processors, this pin is VBAT. ConnectCore 6 SOM has a 0R resistor foreseen on this pin for connecting this signal to LDO3_MCA. By default, the resistor is not populated and MCA_IO28 is available on module pad. 1x 100nF + 1x1μF capacitors connected to GND are placed close to this pin on ConnectCore 6 SOM.
17	- PTA0 - TPM0_CH5 - - - SWD_CLK	L23	MCA_SWD_CLK	Not used on module.

MCA		ConnectCore 6		
Pin Nr	Signal Name	Pad Nr	Signal Name	Usage on module
18	- PTA1 UART0_RX TPM2_CH0 - - - -	AA22	MCA_IO25	Not used on module.
19	- PTA2 UART0_TX TPM2_CH1 - - - -	AA23	MCA_IO6/PMIC_GP_FB2	Connected on ConnectCore 6 SOM to PMIC signal GP_FB2.
20	- PTA3 I2C1_SCL TPM0_CH0 - - - SWD_DIO	M23	MCA_SWD_DIO	Not used on module.
21	- PTA4 I2C1_SDA TPM0_CH1 - - - NMI_b	AA21	MCA_IO26	Not used on module.

MCA		ConnectCore 6		
Pin Nr	Signal Name	Pad Nr	Signal Name	Usage on module
22	VDD	-	LDO3_MCA	MCA power supply 1x 100nF + 1x1µF capacitors connected to GND are placed close to this pin on ConnectCore 6 SOM.
23	VSS	-	GND	MCA ground
24	EXTAL0 PTA18 - UART1_RX TPM_CLKIN0 - - -	-	PMIC_STBY_REQ	Connected on ConnectCore 6 SOM to i.MX6 processor signal PMIC_STBY_REQ (ball F11) and PMIC signal SYS_EN/GPIO8 (ball B9).
25	XTAL0 PTA19 - UART1_TX TPM_CLKIN1 - LPTMR0_ALT1 -	T20	MCA_IO24	Not used on module.
26	RESET_b PTA20	N23	#MCA_RESET	Not used on module.
27	ADC0_SE8 PTB0/LLWU_P5 I2C0_SCL TPM1_CH0 - - - -	R23	MCA_IO2	Not used on module.

MCA		ConnectCore 6		
Pin Nr	Signal Name	Pad Nr	Signal Name	Usage on module
28	ADC0_SE9 PTB1 I2C0_SDA TPM1_CH1 - - - -	H21	NANDF_CS1/#MCA_INT	Connected to i.MX6 processor signal NANDF_CS1 (ball C16).
29	ADC0_SE12 PTB2 I2C0_SCL TPM2_CH0 - - - -	-	INTERNAL_I2C_SCL	Connected directly to PMIC I2C_SCL signal and to i.MX6 processor I2C2_SCL/KEY_COL3 signal (ball U5) over N-channel MOSFET.
30	ADC0_SE13 PTB3 I2C0_SDA TPM2_CH1 - - - -	-	INTERNAL_I2C_SDA	Connected directly to PMIC I2C_SDA signal and to i.MX6 processor I2C2_SDA/KEY_ROW3 signal (ball T7) over N-channel MOSFET.
31	- PTB16 SPI1_MOSI UART0_RX TPM_CLKIN0 SPI1_MISO - -	N22	MCA_IO7	Not used on module.

MCA		ConnectCore 6		
Pin Nr	Signal Name	Pad Nr	Signal Name	Usage on module
32	- PTB17 SPI1_MISO UART0_TX TPM_CLKIN1 SPI1_MOSI - -	P22	MCA_IO8	Not used on module.
33	ADC0_SE14 PTC0 - EXTRG_IN - CMP0_OUT - -	U24	MCA_IO4	Not used on module.
34	ADC0_SE15 PTC1/LLWU_P6/ RTC_CLKIN I2C1_SCL - TPM0_CH0 - - -	-	KINETIS_32K	This MCA pin is connected to 32K output of the PMIC. For KL14, KL15, KL24 and KL25 this pin can be configured as RTC_CLKIN signal.
35	ADC0_SE11 PTC2 I2C1_SDA - TPM0_CH1 - - -	R22	MCA_IO9	Not used on module.

MCA		ConnectCore 6		
Pin Nr	Signal Name	Pad Nr	Signal Name	Usage on module
36	- PTC3/LLWU_P7 - UART1_RX TPM0_CH2 CLKOUT - -	T22	MCA_IO10	Not used on module.
37	- PTC4/LLWU_P8 SPI0_PCS0 UART1_TX TPM0_CH3 - - -	U22	MCA_IO11	Not used on module.
38	- PTC5/LLWU_P9 SPI0_SCK LPTMR0_ALT2 - - CMP0_OUT -	M21	MCA_IO12	Not used on module.
39	CMP0_IN0 PTC6/ LLWU_P10 SPI0_MOSI EXTRG_IN - SPI0_MISO - -	N21	MCA_IO13	Not used on module.

MCA		ConnectCore 6		
Pin Nr	Signal Name	Pad Nr	Signal Name	Usage on module
40	CMP0_IN1 PTC7 SPI0_MISO - - SPI0_MOSI - -	R20	MCA_IO19	Not used on module.
41	- PTD0 SPI0_PCS0 - TPM0_CH0 - - -	A6	CSIO_DAT11/ECSPI2_SS0	Connected to i.MX6 processor signal CSIO_DAT11 (ball M3) and to LGA pad A6. This pin can be configured as a SPI chip select shared between MCA and i.MX6 processor.
42	ADC0_SE5b PTD1 SPI0_SCK - TPM0_CH1 - - -	D6	CSIO_DAT8/ECSPI2_SCLK	Connected to i.MX6 processor signal CSIO_DAT8 (ball N6) and to LGA pad D6. This pin can be configured as a SPI clock shared between MCA and i.MX6 processor.
43	- PTD2 SPI0_MOSI UART2_RX TPM0_CH2 SPI0_MISO - -	K5	CSIO_DAT10/ ECSPI2_MISO	Connected to i.MX6 processor signal CSIO_DAT10 (ball M1) and to LGA pad K5. This pin can be configured as a SPI MISO shared between MCA and i.MX6 processor.


MCA		ConnectCore 6		
Pin Nr	Signal Name	Pad Nr	Signal Name	Usage on module
44	- PTD3 SPI0_MISO UART2_TX TPM0_CH3 SPI0_MOSI - -	D5	CSI0_DAT9/ECSPI2_MOSI	Connected to i.MX6 processor signal CSI0_DAT9 (ball N5) and to LGA pad D5. This pin can be configured as a SPI MOSI shared between MCA and i.MX6 processor.
45	- PTD4/ LLWU_P14 SPI1_PCS0 UART2_RX TPM0_CH4 - - -	R21	MCA_IO16	Not used on module.
46	ADC0_SE6b PTD5 SPI1_SCK UART2_TX TPM0_CH5 - - -	T21	MCA_IO22	Not used on module.

MCA		ConnectCore 6		
Pin Nr	Signal Name	Pad Nr	Signal Name	Usage on module
47	ADC0_SE7b PTD6/ LLWU_P15 SPI1_MOSI UART0_RX - SPI1_MISO - -	T24	MCA_IO3	Not used on module.
48	- PTD7 SPI1_MISO UART0_TX - SPI1_MOSI - -	AA20	MCA_IO21	Not used on module.

Shared I2C Bus

The screenshot below shows how the I2C bus (I2C2) is used on ConnectCore 6 module. The bus is shared between i.MX6 processor and the PMIC/MCA microcontroller. The usage of N-channel MOSFET ensures the bus is fully isolated and allows the i.MX6 processor to be shut off while MCA and PMIC are powered.

The 0R resistors (R88 and R99) are populated on modules without MCA processor.

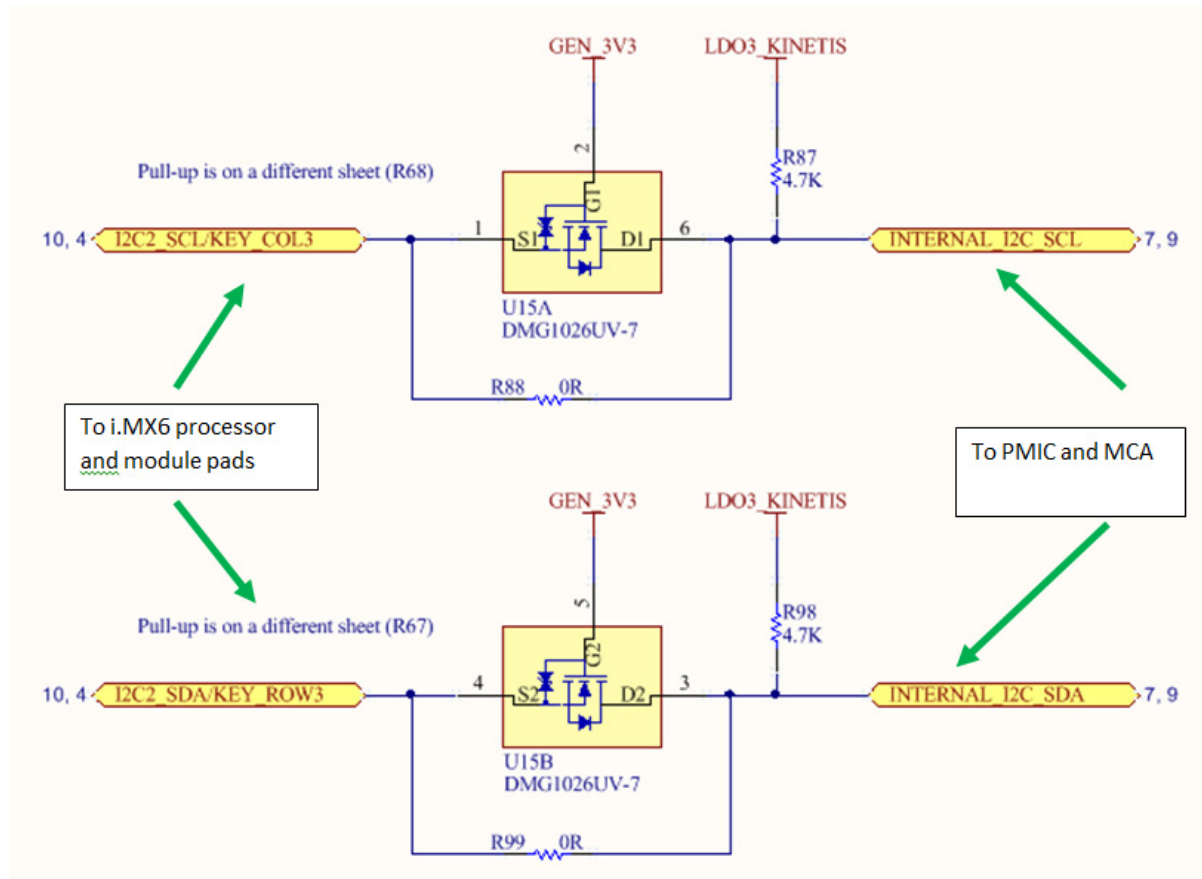

Shared SPI Bus

In addition to an I2C interface, i.MX6 shares an SPI bus with the MCA microcontroller. The table below shows this connection:

SPI Function	i.MX6 pad	MCA I/O
SPI Chip Select	CSI0_DAT11 (ConnectCore 6 LGA pad A6): Alt0: IPU1_CSI0_DATA11 Alt1: AUD3_RXFS Alt2: ECSPI2_SS0 Alt3: UART1_RX_DATA Alt4: - Alt5: GPIO6_IO03 Alt6: - Alt7: ARM_TRACE14	PTD0 (MCA pin 41): Alt0: - Alt1: PTD0 Alt2: SPI0_PCS0 Alt3: - Alt4: - Alt5: TPM0_CH0 Alt6: - Alt7: -
SPI Clock	CSI0_DAT8 (ConnectCore 6 LGA pad D6): Alt0: IPU1_CSI0_DATA08 Alt1: EIM_DATA06 Alt2: ECSPI2_SCLK Alt3: KEY_COL7 Alt4: I2C1_SDA Alt5: GPIO5_IO26 Alt6: - Alt7: ARM_TRACE05	PTD1 (MCA pin 42): Alt0: ADC0_SE5b Alt1: PTD1 Alt2: SPI0_SCK Alt3: - Alt4: TPM0_CH1 Alt5: - Alt6: - Alt7: -
SPI MISO	CSI0_DAT10 (ConnectCore 6 LGA pad K5): Alt0: IPU1_CSI0_DATA10 Alt1: AUD3_RXC Alt2: ECSPI2_MISO Alt3: UART1_TX_DATA Alt4: - Alt5: GPIO5_IO28 Alt6: - Alt7: ARM_TRACE07	PTD2 (MCA pin 43): Alt0: - Alt1: PTD2 Alt2: SPI0_MOSI Alt3: UART2_RX Alt4: TPM0_CH2 Alt5: SPI0_MISO Alt6: - Alt7: -
SPI MOSI	CSI0_DAT9 (ConnectCore 6 LGA pad D5): Alt0: IPU1_CSI0_DATA09 Alt1: EIM_DATA07 Alt2: ECSPI2_MOSI Alt3: KEY_ROW7 Alt4: I2C1_SCL Alt5: GPIO5_IO27 Alt6: - Alt7: ARM_TRACE06	PTD3 (MCA pin 44): Alt0: - Alt1: PTD3 Alt2: SPI0_MISO Alt3: UART2_TX Alt4: TPM0_CH3 Alt5: SPI0_MOSI Alt6: - Alt7: -

The i.MX6 pads listed above are connected to ConnectCore 6 pads. If the MCA microcontroller firmware doesn't use these signals, they are available on the carrier board and can be used in any of the alternative functions listed above.

Modules without eMMC Flash

Some variants of the ConnectCore 6 module can be ordered without an eMMC flash populated. For these modules, the bootloader and the operating system must be programmed using external boot media. Digi recommends booting from the i.MX6 uSDHC-2 port, which corresponds to the ConnectCore 6 Single-Board Computer microSD port.

For booting from the i.MX6 uSDHC-2 port, following resistors must be populated:

ConnectCore 6 signal (pad)	Boot configuration	Resistor	Comment
EIM_DA5 (AA19)	BOOT_CFG1[5]	1K pull-down	Selecting SD/eSD/SDXC
EIM_DA12 (V22)	BOOT_CFG2[4]	1K pull-down	Selecting uSDHC-2
EIM_DA13 (V20)	BOOT_CFG2[5]	1K pull-up to NVCC_EIM	Selecting 4-bit bus width

Mechanical specifications

Note that all dimensions are in millimeters




ConnectCore 6 module weight is 27 grams.

There must be a recess in the host PCB to accommodate the components on the bottom side of the SOM.

All dimensions are in millimeters.

For additional information, see [Digi Application Note #31-31-14-x](#) on the Digi technical support website.

Host PCB Footprint

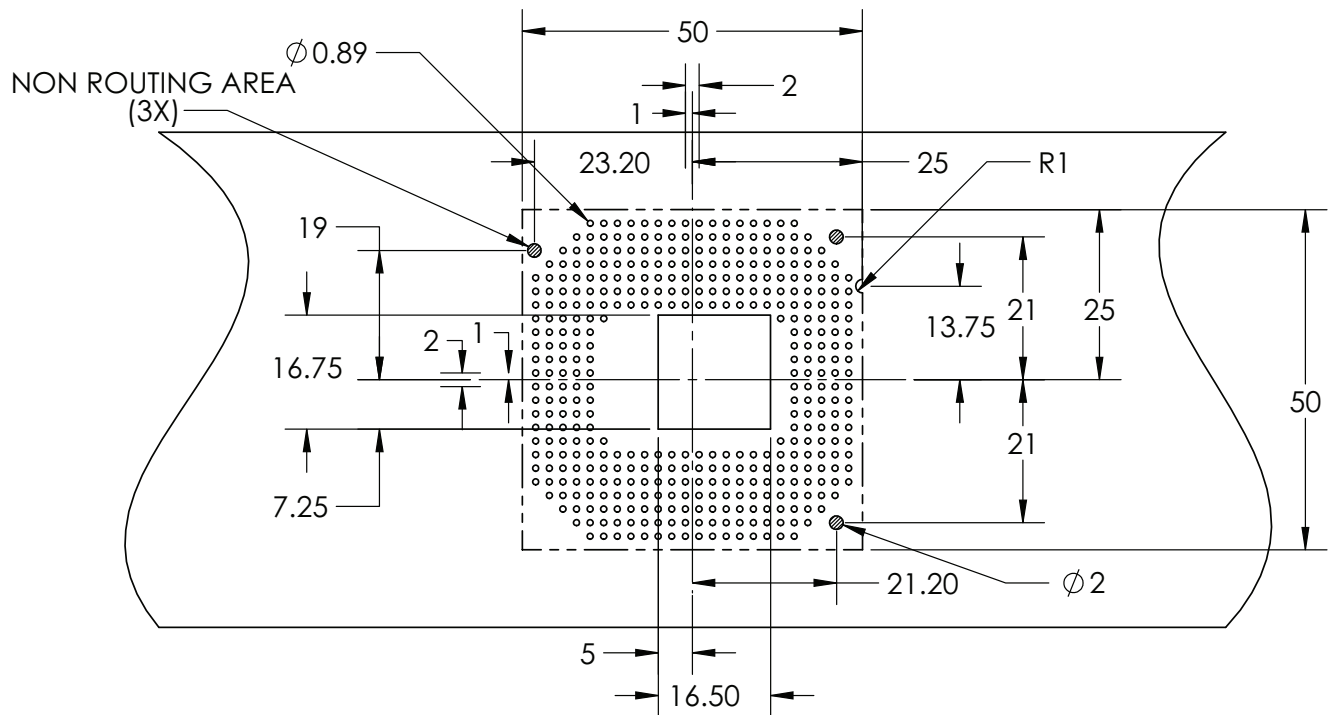

Note Minimum thickness of the host board shall be 2mm.

Specifications for the ConnectCore 6

Environmental Specifications

The Freescale i.MX6 thermal specification is based on maximum junction temperature (Tj) of the specific application processor variant used. In order to support thermal management assistance through software, the Freescale i.MX6 processor has a built-in junction temperature sensor/monitor.

The table below outlines the three temperature related operational threshold modes with severity related recovery actions as defined in software.

Mode	Temperature (Tj)	Recovery Action
Critical	> Max Tj - 5°C	Automatic system reboot to protect i.MX6 from damage
Hot	> Max Tj - 15°C	i.MX6 core and GPU frequencies are reduced Additional actions may be initiated depending on actual system implementation
Active	< Max Tj - 25°C	Limitations applied in Hot mode are removed again

Linux - Android Users

At any time, the processor junction temperature can be measured by entering the following shell command:

```
cat /sys/class/thermal/thermal_zone0/temp
```

Note Depending on the operating system, the junction temperature is displayed in milli °C or °C.

The ConnectCore 6 multichip module was designed to provide customers with unique options to simplify and support the implementation of thermal management approaches in their designs, as needed:

- The ConnectCore 6 offers a fully shielded design (including internal thermal compounds) with optimized heat transfer and heat spreading for specific internal components (processor and PMIC). It is ideally suited for more efficient heat dissipation by providing a single, uniform surface for thermal management via enclosures, heat sinks or other means.
- The surface mount design of the ConnectCore 6 allows for additional dissipation of heat through the carrier board it is mounted on.

Evaluation of the ConnectCore 6 thermal performance has successfully demonstrated that the ambient operating temperatures specified can be support by the module. However, actual ambient operating temperature performance may vary and is highly dependent on the specific use-case, such as, enclosure design, system design, i.MX6 processor variant, GPU/VPU activity, on-module peripherals used. Your specific system design and application may require additional thermal management such as passive (heatsink/-spreader) or active (airflow) cooling at elevated temperatures.

ConnectCore 6 Variant	Ambient Operating Temperature ¹	Storage Temperature
Industrial	-40 to 85°C ²	-40 to 125°C
Commercial	0 to 70°C	-40 to 125°C
1. Please note that ambient operating temperature ratings are highly dependent on the specific use-case, e.g. enclosure design, system design, i.MX6 processor variant, GPU/VPU activity, peripherals used. Your specific system design and application may require additional thermal management such as passive (heatsink/-spreader) or active (airflow) cooling. 2. Running over 70°C ambient typically requires the implementation of thermal management strategies.		

Contact Digi if you need information and/or guidance related to thermal management in your specific application.

Moisture Sensitivity and Shelf Life

1. The ConnectCore for i.MX6 module is classified as a Level 3 Moisture Sensitive Device in accordance with IPC/JEDEC J-STD-020.
2. Calculated shelf life in sealed packaging: 12 months at <40°C and <90% relative humidity (RH).
3. Environmental condition during production: 30°C /60% RH according to IPC/JEDEC J-STD -033A, paragraph 5.
4. Maximum time between opening of the sealed packaging and reflow process must not exceed 168 hours, based on condition b), IPC/JEDEC J-STD -033A, paragraph 5.2.
5. Baking is required, if conditions b) or c) do not apply. See above.
6. Baking is required, if the packaging humidity indicator indicates 10% RH or higher.
7. If baking is required, bake modules in trays 4-6 hours at 125°C; maximum stacking height is 10 trays.

Mounting

The ConnectCore 6 module has been designed with easy integration into existing SMT processes in mind. Guidance for mounting the module on your carrier board is given in this section of the document.

The ConnectCore 6 module is specified for one (1) soldering cycle only. Modules are also not sealed and therefore they should not be subjected to a wash cycle or similar treatment where condensation could occur. Contact Digi International for additional guidance to discuss conformal coating approaches and options, if needed. Solder Paste

The following solder paste type has been approved for mounting the module on a carrier board:

- SAC305 (Lead-free: Alpha OM-340 Type 4 or equivalent)

Solder Paste Print

The following solder paste printing parameters are recommended:

- Stencil Thickness: 0.15 mm/5 mil
- Stencil Diameter: One to one of Pad diameter (to +20% of pad)
- Paste alignment: 20% off the pad max (offset <20% pad diameter)

Stencil

The recommendation is to use a laser cut and/or electro-formed stencil for placing the ConnectCore 6 module. Based on the actual coplanarity characteristics of your carrier board, adjustments may be required to determine the optimal solder paste volume.

It is also recommended to perform an X-ray analysis of the initial production run of your assembly with the ConnectCore 6. Please contact Digi for additional support.

Coplanarity

The coplanarity measured on the ConnectCore for 6 is <0.003" bow and twist (98% confidence interval). It is important that the carrier board is also coplanar. If the carrier board is thinner than the ConnectCore 6 it is recommended that the assembly be supported during the reflow process, i.e. reflow fixture should be used to minimize the potential bow of the carrier card.

Bow and twist measurements have been done with SmartScope Flash 500 equipment which has a Z accuracy up to $(2.0 + 8L/1000) \mu\text{m}$.

SMT Pick and Place

- Placement Nozzle: Large is available on the machine
- Nozzle Pick Surface: Center of Shield on i.MX6 SOM
- Placement Speed: Slowest speed for the machine
- Placement alignment: 10% of pad diameter (compensating for module weight and supporting alignment). The module should be placed last as part of the assembly/mounting process to eliminate unexpected shifting.


SMT Process Parameter Reference

Process	SMT process	Specification recommendations
Screen print	Solder paste	Leaded: Indium NC-SMQ92J / Lead-free: Alpha OM-340
	Stencil thickness	0.15mm / 5 mil
	Stencil diameter	1.47mm / 58mil
	Paster alignment	25% off the pad (offset <0.25* diameter)
PnP	Placement nozzle	0>15mm vacuum
	Nozzle Pick Surface	PnP cap center
	Speed	Slowest speed for the machine
	Placement Sequence	Place the SoM last
	Placement Alignment	50% off the pad (offset <.5* diameter)
Reflow	Belt speed	0.6-1.1 m/sec
	Refer to SMT profile recommendation in the next page	

Reflow Profile Using Seven Zone Oven, SAC 305Lead-Free Solder Paste (Alpha OM-340)

Time Above Liquidous (TAL) is recommended to be between 56 to 63 seconds. Use of 40AWG K-type thermal couple and M.O.L.E or equivalent thermal profiler is recommended. The first recommended thermal probe location is on the outer row of pads, to be on the out most row of pins preferably a ground pad. The second thermal probe location is on the inner row of pads preferably a signal pad.

The following image shows the reflow profile based on a seven zone convection oven.

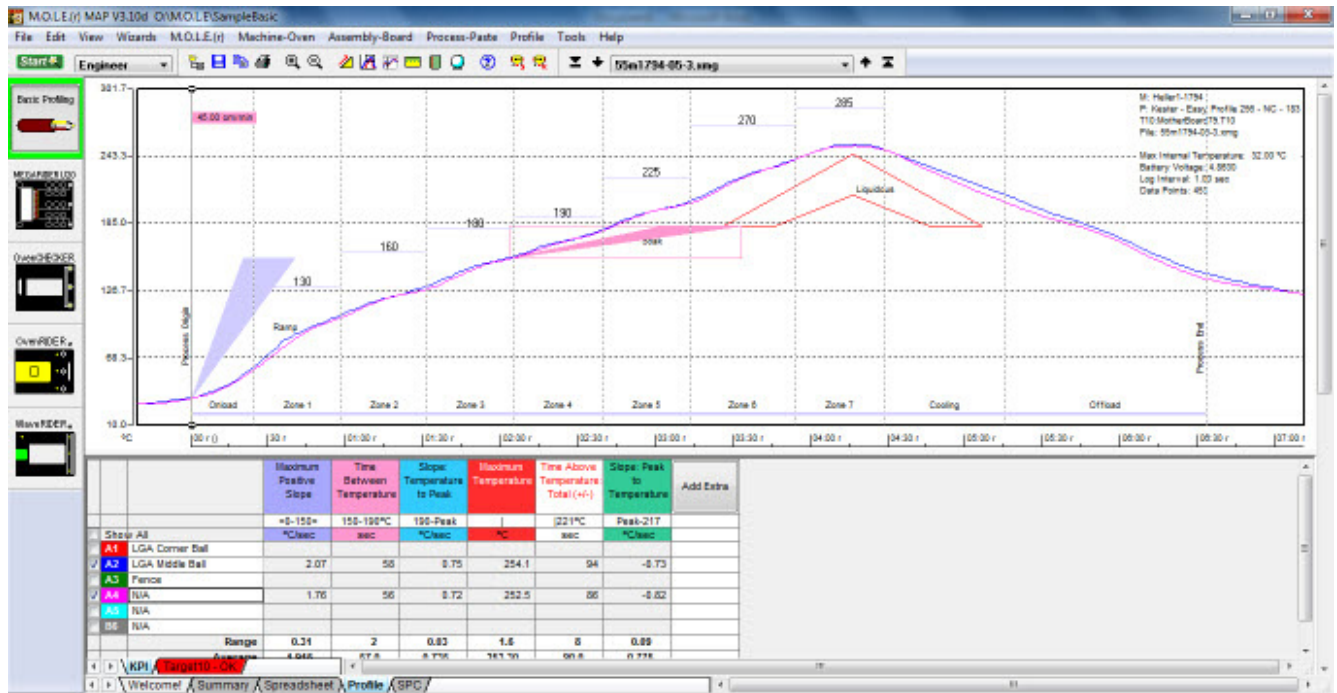

The reflow profile shown above is valid for the combination solder paste/reflow machine and Digi reference carrier board. Optimization of a reflow profile will depend on the selected solder paste/reflow machine (reflow or vapor phase) and carrier board design.

The ConnectCore i.MX6 is approved to withstand a total of four reflow cycles. Two reflow cycles are required for manufacturing the ConnectCore i.MX6 SOM. Two (2) reflow cycles are remaining for mounting the module on the carrier board. Digi strongly recommends to solder the ConnectCore i.MX6 module during the last reflow cycles of the carrier board manufacturing process.

Network Interface

WLAN Standard

- IEEE 802.11a/b/g/n standards
- HT20, and HT40 IEEE 802.11n

Frequency Band

- 2.40-2.50 GHz (low band)
- 5.18-5.825 GHz (High band)

Data Rates


- 802.11b: 1, 2, 5.5, 11 Mbps
- 802.11a/g: 6, 9, 12, 18, 24, 35, 48, 54 Mbps
- 802.11n HT20 FGI: 6.5, 13, 19.5, 26, 39, 52, 58.5, 65 Mbps
- 802.11n HT20 HGI: 7.2, 14.4, 21.7, 29.9, 43.3, 57.8, 65, 72.2 Mbps
- 802.11n HT40 FGI (5GHz only): 13.5, 27, 40.5, 54, 81, 108, 121.5, 135 Mbps
- 802.11n HT40 HGI (5GHz only): 15, 30, 45, 60, 90, 120, 135, 150 Mbps

Antenna ports

ConnectCore for i.MX6 module variants supporting both Bluetooth and WLAN are populated with one single antenna port covering both 2.4 and 5GHz frequencies.

Module variants supporting only WLAN provide additionally antenna diversity feature. Two antenna ports supporting the same transmit and receive signals are populated on the product. The software running on the ConnectCore SOM switches from one antenna port to the other depending on the RSSI (Receive Signal Strength Indication) of the received beacon, which guarantees that the antenna with the best signal is always used and thus improve the quality and reliability of the wireless link. The interval between comparisons of RSSI values on the two antennas is by default 10 seconds, but can be configured in software. Furthermore, when the RSSI measured is too low, the software will automatically switch to the other antenna regardless of the 10 second interval. Hence, antenna diversity is an option and it is absolutely safe to mount only one antenna in the system, connected for instance to the primary antenna port.

The picture below shows the location of the primary and secondary antennas.

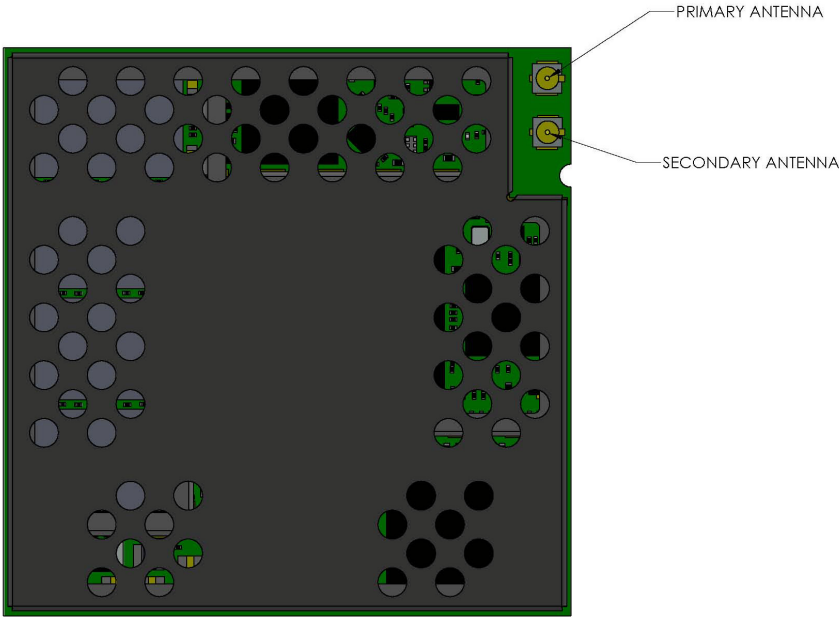

Note Modules with Bluetooth capabilities will not support spatial diversity.

Modulation

Mode	Data rate	Modulation	Mode	Data rate	Modulation	Mode	Data rate	Modulation
802.11b	1	DBPSK	802.11g	6	BPSK	802.11a	6	BPSK
	2	DQPSK		9	BPSK		9	BPSK
	5.5	CCK		12	QPSK		12	QPSK
	11	CCK		18	QPSK		18	QSPK
				24	16-QAM		24	16-QAM
				35	16-QAM		35	16-QAM
				48	64-QAM		48	64-QAM
				54	64-QAM		54	64-QAM

Mode	MCS	Modulation	Data rate			
802.11n			HT20 (2.4 GHz and 5GHz)		HT40 (5GHz only)	
			FGI	HGI	FGI	HGI
	MCS0	BPSK	6.5	7.2	13.5	15
	MCS1	QPSK	13	14.4	27	30

Mode	MCS	Modulation			Data rate	
	MCS2	QPSK	19.5	21.7	40.5	45
	MCS3	16-QAM	26	29.9	54	60
	MCS4	16-QAM	39	43.3	81	90
	MCS5	64-QAM	52	57.8	108	120
	MCS6	64-QAM	58.5	65	121.5	135
	MCS7	64-QAM	65	72.2	135	150

Security/Interoperability

- WPA-PSK
- WPA-Enterprise
- WPA2-Personal
- WPA2-Enterprise
- Wi-Fi Direct
- Soft AP
- WAPI (optional, China)
- Cisco CCXv4 ASD certification ready (optional)
- Wi-Fi Alliance Logo certification ready

The listed capabilities are dependent on software platform in use. Refer to the corresponding software platform documentation for additional information.

Contact Digi if your end product requires a Wi-Fi Alliance Logo and/or Cisco CCX certification.

Frequency Bands

US, Canada

- 2.412 to 2.462 GHz; 11 channels
- 5.180 to 5.320 GHz; 8 channels
- 5.500 to 5.700 GHz, 8 channels (excludes 5.600 to 5.650 GHz)
- 5.745 to 5.825 GHz; 5 channels

Europe

- 2.412 to 2.472 GHz; 13 channels
- 5.180 to 5.320 GHz; 8 channels
- 5.500 to 5.700 GHz, 8 channels (excludes 5.600 to 5.640 GHz)

Australia, New Zealand

- 2.412 to 2.462 GHz; 11 channels
- 5.180 to 5.320 GHz; 8 channels
- 5.745 to 5.825 GHz; 5 channels

Japan

- 2.412 to 2.472 GHz; 13 channels
- 5.180 to 5.320 GHz; 8 channels
- 5.500 to 5.700 GHz; 11 channels

Ad-Hoc Mode Channels

- 2.4GHz Band - Channels 10 and 11
- 5GHz Band US, Australia, New Zealand - Channels 36, 40, 44, 45, 149, 157, 161, and 165 Channels 36, 40, 44, and 45 are for indoor use only
- 5GHz Band Europe and Japan - per 802.11d

5GHz HT20 and HT40 channel available

Channel number	Frequency (MHz)	Mode	Secondary channel allowed
36	5180	HT40	PLUS
38	5190	HT20	
40	5200	HT40	MINUS
44	5220	HT40	PLUS
46	5230	HT20	
48	5240	HT40	MINUS
52	5260	HT40	PLUS
54	5270	HT20	
56	5280	HT40	MINUS
60	5300	HT40	PLUS
62	5310	HT20	
64	5320	HT40	MINUS
100	5500	HT40	PLUS
102	5510	HT20	
104	5520	HT40	MINUS
108	5540	HT40	PLUS

Channel number	Frequency (MHz)	Mode	Secondary channel allowed
110	5550	HT20	
112	5560	HT40	MINUS
116	5580	HT40	PLUS
118	5590	HT20	
120	5600	HT40	MINUS
124	5620	HT40	PLUS
126	5630	HT20	
128	5640	HT40	MINUS
132	5660	HT40	PLUS
134	5670	HT20	
136	5680	HT40	MINUS
140	5700	HT20	
159	5745	HT40	PLUS
151	5755	HT20	
153	5765	HT40	MINUS
157	5785	HT40	PLUS
159	5795	HT20	
161	5805	HT40	MINUS
165	5825	HT20	

Receive Sensitivity

Network type	Sensitivity
802.11b	-88 dBm
802.11g	-88 dBm
802.11n (2.4GHz)	-89 dBm
802.11a	-90 dBm
802.11n (5GHz, HT20)	-90 dBm
802.11n (5GHz, HT40)	-86 dBm

Transmit Power

Network type	Transmit power
802.11b	10.5 dBm
802.11g/n	11 dBm
802.11a/n	13 dBm

Bluetooth

- Bluetooth 3.0 + HS (BT3.0 + HS)
- Bluetooth 4.0 (BT4.0)
- Class 1.5 Bluetooth with integrated TX/RX switch

Electrical Characteristics


Voltage supplies

Parameter	Min	Typ	Max	Unit
5V supply	4.2	5	5.5	V
VCC_LICELL	2.0	3.0	TBD	V
LDO3_MCA	1.71	3.3	3.6	V

Note No specific ESD protection components have been implemented on the ConnectCore for i.MX6 module. ESD protection level on the module's I/Os is the same as what is specified in the freescale datasheet. Any required ESD protection must be implemented on the carrier board.

Power Consumption

The following image displays the current consumption of the ConnectCore for i.MX6 module when booting respectively through U-Boot, Linux kernel and Android user space.

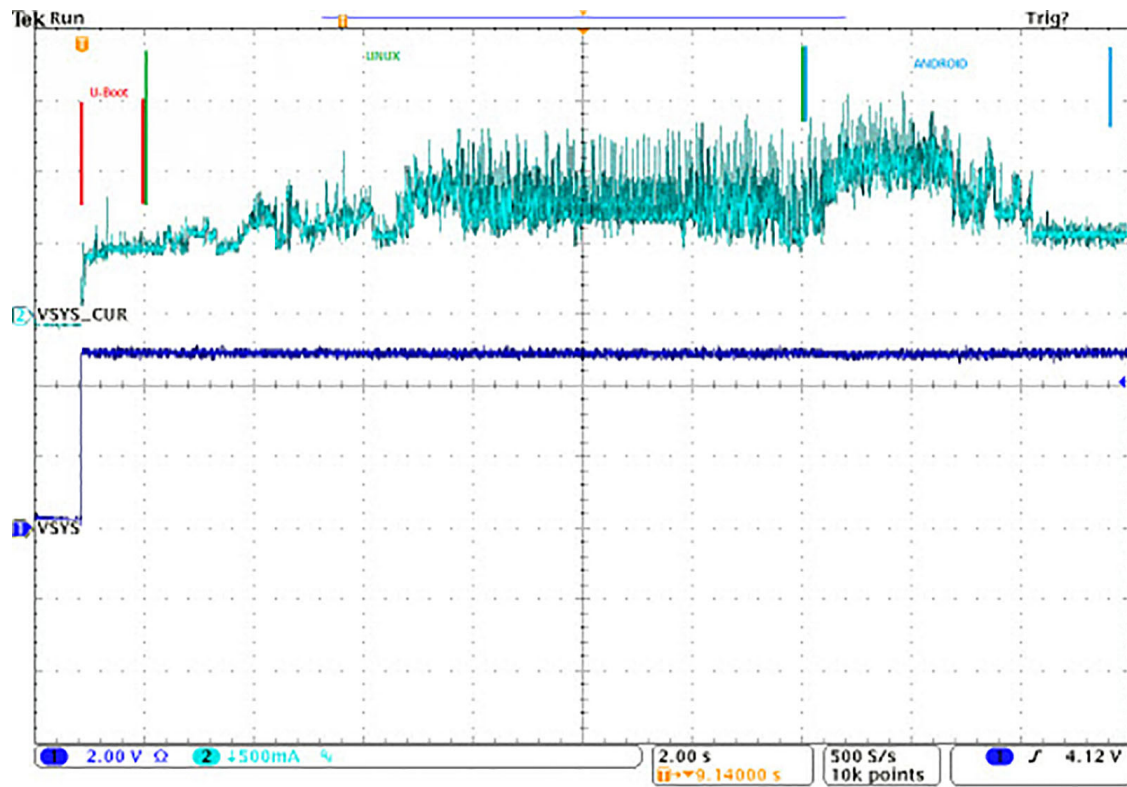

Certifications

United States FCC

The ConnectCore™ for i.MX6 Module complies with Part 15 of the FCC rules and regulations. Compliance with the labeling requirements, FCC notices and antenna usage guidelines is required. To fulfill FCC Certification, the OEM must comply with the following regulations:

The system integrator must ensure that the text on top side of the module is placed on the outside of the final product.

ConnectCore™ for i.MX6 Module may only be used with antennas approved [refer to the antenna tables in this section].



WARNING! The Original Equipment Manufacturer (OEM) must ensure that FCC labeling requirements are met. This includes a clearly visible label on the outside of the final product enclosure that displays the contents shown below. Required FCC Label for OEM products containing the ConnectCore™ for i.MX6 Module.

For WiFi/Bluetooth variant

Contains FCC ID: MCQ-CCIMX6B

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For WiFi only variant

Contains FCC ID: MCQ-CCIMX6

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Notices

IMPORTANT: The ConnectCore™ for i.MX6 module has been certified by the FCC for use with other products without any further certification (as per FCC section 2.1091). Modifications not expressly approved by Digi could void the user's authority to operate the equipment.

IMPORTANT: OEMs must test final product to comply with unintentional radiators (FCC section 15.107 & 15.109) before declaring compliance of their final product to Part 15 of the FCC Rules.

IMPORTANT: The ConnectCore™ for i.MX6 module has been certified for remote and base radio applications. If the module will be used for portable applications, the device must undergo SAR testing. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Re-orient or relocate the receiving antenna, Increase the separation between the equipment and receiver, Connect equipment and receiver to outlets on different circuits, or Consult the dealer or an experienced radio/TV technician for help.

FCC-Approved Antennas

The ConnectCore™ for i.MX6 can be installed utilizing antennas and cables constructed with non-standard connectors (RPSMA, RPTNC, and so on).

The modules are FCC approved for fixed base station and mobile applications for the channels indicated in the tables below. If the antenna is mounted at least 20cm (8 in.) from nearby persons, the application is considered a mobile application. Antennas not listed in the table must be tested to comply with FCC Section 15.203 (Unique Antenna Connectors) and Section 15.247 (Emissions).

The antennas in the tables below have been approved for use with this module. Digi does not carry all of these antenna variants. Contact Digi Sales for available antennas.

Antennas Approved for Use with the ConnectCore™ for i.MX6 Wi-Fi Modules

Omni- directional antennas			
Part number	Type (description)	Peak Gain 2.4 GHz	Peak Gain 5 GHz
Digi International A24-HASM-450	Dipole (articulated RPSMA, 2.4GHz antenna)	1.8dBi	
Linx Technologies Inc ANT-DB1-RAF-RPS	Dipole (articulated RPSMA, 2.4GHz and 5GHz antenna)	2.5dBi	4.6dBi
Yageo ANTX100P001B24003	2.4GHz PCB antenna	4dBi (@2.4GHz) 4.4dBi (@2.45GHz) 4.1dBi (@2.5GHz)	
Ethertronics 1001932	2.4 - 5GHz PCB antenna	1.5-2.5dBi	3-5dBi

Note If using the RF module in a portable application (for example - if the module is used in a hand-held device and the antenna is less than 20cm from the human body when the device is in operation): The integrator is responsible for passing additional SAR (Specific Absorption Rate) testing based on FCC rules 2.1091 and FCC Guidelines for Human Exposure to Radio Frequency Electromagnetic Fields, OET Bulletin and Supplement C. The testing results will be submitted to the FCC for approval prior to selling the integrated unit. The required SAR testing measures emissions from the module and how they affect the person.

RF Exposure



CAUTION! To satisfy FCC RF exposure requirements for mobile transmitting devices, a separation distance of 20 cm or more should be maintained between the antenna of this device and persons during device operation. To ensure compliance, operations at closer than this distance are not recommended. The antenna used for this transmitter must not be co-located in conjunction with any other antenna or transmitter. The preceding statement must be included as a CAUTION statement in OEM product manuals in order to alert users of FCC RF Exposure compliance.

Europe (ETSI)

The ConnectCore™ for i.MX6 Module has been certified for use in several European countries. For a complete list, refer to www.digi.com.


If the ConnectCore™ for i.MX6 module is incorporated into a product, the manufacturer must ensure compliance of the final product to the European harmonized EMC and low-voltage/safety standards. A Declaration of Conformity must be issued for each of these standards and kept on file as described in Annex II of the R&TTE Directive.

Furthermore, the manufacturer must maintain a copy of the ConnectCore™ for i.MX6 Hardware Reference manual documentation and ensure the final product does not exceed the specified power ratings, antenna specifications, and/or installation requirements as specified in the user manual. If any of these specifications are exceeded in the final product, a submission must be made to a notified body for compliance testing to all required standards.

OEM Labeling Requirements

The **CE** marking must be affixed to a visible location on the OEM product.

CE Labeling Requirements

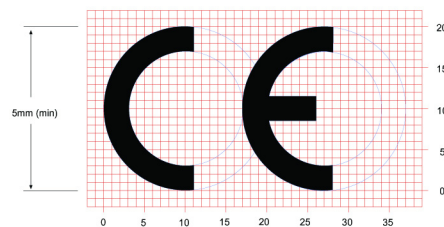

The CE mark shall consist of the initials **CE** taking the following form:

- If the CE marking is reduced or enlarged, the proportions given in the above graduated drawing must be respected.

- The CE marking must have a height of at least 5mm except where this is not possible on account of the nature of the apparatus.
- The CE marking must be affixed visibly, legibly, and indelibly.

Declarations of Conformity

Digi has issued Declarations of Conformity for the ConnectCore™ for i.MX6 module concerning emissions, EMC and safety. Files can be obtained by contacting Digi Support.

Note Digi does not list the entire set of standards that must be met for each country. Digi customers assume full responsibility for learning and meeting the required guidelines for each country in their distribution market.

Approved Antennas

The same antennas have been approved for Europe as stated in the FCC table for use with the ConnectCore™ for i.MX6 module.

Canada (IC)

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Labeling Requirements

Labeling requirements for Industry Canada are similar to those of the FCC. A clearly visible label on the outside of the final product enclosure must display the following text:

For WiFi/Bluetooth variant

Contains Model ConnectCore™ for i.MX6 Radio, IC: 1846A-CCIMX6B

For WiFi only variant

Contains Model ConnectCore™ for i.MX6 Radio, IC: 1846A-CCIMX6

The integrator is responsible for its product to comply with IC ICES-003 & FCC Part 15, Sub. B - Unintentional Radiators. ICES-003 is the same as FCC Part 15 Sub. B and Industry Canada accepts FCC test report or CISPR 22 test report for compliance with ICES-003.

Transmitters with Detachable Antennas

This radio transmitter (IC: 1846A-CCIMX6 / IC: 1846A-CCIMX6B) has been approved by Industry Canada to operate with the antenna types listed in the table above with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Le présent émetteur radio (IC: 1846A-CCIMX6 / IC: 1846A-CCIMX6B) a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types

d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Japan

この製品は、周波数帯域 5.15 ~ 5.35 GHz で動作しているときは、屋内においてのみ使用可能です。

This device has been granted a designation number by Ministry of Internal Affairs and Communications according to:

Ordinance concerning Technical Regulations Conformity Certification etc. of Specified Radio Equipment (特定無線設備の技術基準適合証明等に関する規則).

- Article 2, Paragraph 1, Item 19, 19-3, 19-3-2 Category: WW, XW, YW
- Model/Name of equipment: ConnectCore 6 (i.MX6)
- Radio label marking: **R**209-J00137

This device should not be modified (otherwise the granted designation number will be invalid).